

PART NUMBER	DESCRIPTION	REF. NO.
528690	RETAINING PLATE	1H05
528701	BEARING	1H05
528702	THRUST WASHER	1J06
528720	DISTANCE PIECE	1H05
528721	DISTANCE PIECE	1H05
528722	DISTANCE PIECE	1H05
528747	SEAL-OIL	1I11
528865	STUD	1H03
529394	BAFFLE PLATE	1C08
529823	SUMP	1C07
529823	SUMP-ENGINE OIL	1E07
530178	THRUST WASHER	1C04
530179	RETAINING RING	1C04
530343	OIL THROWER	1D04
530476	THERMOSTAT BYPASS	1C10
530476	HOUSING-WATER	1E10
530478	PUMP CASING	1C10
530478	BODY WATER PUMP	1E09
530481	SEALING PLATE	1D06
530890	PULLEY	1C10
530890	PULLEY-FAN	1E09
530966	OLIVE	1N10
530984	SHIM 0.003	1J06
530985	SHIM 0.005	1J06
530986	SHIM 0.010	1J06
530987	SHIM 0.030	1J06
530988	SWIVEL PIN & STEERING LEVER	1J06
530989	SWIVEL PIN & STEERING LEVER	1J06
530990	SWIVEL PIN & STEERING LEVER	1J06
530991	SWIVEL PIN & STEERING LEVER	1J06
531001	LOCKER	1J06
531040	RELAY LEVER UPPER	1K05
531043	STUD	1J06
531104	ENGINE BRACKET	1H09
531388	CONTROL ROD	1008
531388	CONTROL ROD PEDAL SHAFT	1011
531390	CONTROL ROD	1007
531390	ROD-ACCELERATOR CROSS SHAFT	1011
531391	CONTROL ROD	1012
531392	BELL CRANK	1012
531394	CLIP	1007
531394	RETAINER-ACCELERATOR CONTROL ROD	1008
531394	CLIP-ACCELERATOR ROD	1011
531394	RETAINER-ACCELERATOR ROD	1012
531394	RETAINER-CONTROL ROD	1014

PART NUMBER	DESCRIPTION	REF.NO.
531395	CROSS SHAFT LEVER	1007
531395	LVR-ACCELERATOR CROSS SHAFT	1011
531433	O RING	1J06
531440	CONTROL ROD ASSEMBLY	1008
531440	CONTROL ROD ASSEMBLY	1010
531494	STUD	1J06
531586	GASKET FOR HEAD LAMP	2F02
531684	STOP TAIL LAMP	2F03
531873	VALVE ROCKER	1D08
531874	VALVE ROCKER	1D08
531888	ANCHOR PLATE	1L04
531889	ANCHOR PLATE	1L04
531893	SPRING	1L04
532319	O RING	1D11
532319	'O' RING-OIL DIPSTICK TUBE	1F02
532323	SEAL	1H07
532323	'O'RING	1I09
532387	SEALING RING	1C07
532387	O RING	1D08
532387	'O'RING DIPSTICK	1E07
532387	O RING	1E08
532453	THERMOSTAT	1C10
532453	THERMOSTAT	1E10
532879	BASE FOR STOP TAIL LAMP	2F03
532880	LENS FOR STOP TAIL LAMP	2F03
532881	STOP TAIL LAMP	2F03
532926	ADJUSTING SCREW FOR SELECTOR SHAFT	1H13
532979	LOW GEAR WHEEL	1H08
533040	BOTTOM COVER	1H09
533080	GEAR CLUSTER	1H07
533358	PLUG-GEARBOX OIL FILLER	1I04
533358	PLUG-OIL FILLER GEARBOX	1I05
533731	HOUSING ASSEMBLY	1H09
533765	RETAINER-SPEEDO GEAR	1I11
533786	THRUST WASHER	1J08
533787	THRUST WASHER	1J08
533788	THRUST WASHER	1J08
534021	SPRING DOWEL	1010
534790	NUT	1M09
534897	BOLT-BANJO	1F06
535023	FOOT PUMP	2L11
535068	TOWING JAW AND PINTLE	2L03
535168	CARBURETTER LEVER BALL END	1008
535173	REAR ROAD SPRING	1J18
535286	RELAY LEVER	1K05

PART NUMBER	DESCRIPTION	REF.NO.
535708	STUD & DOWEL KIT	1D03
535989	VALVE SPRING	1D07
536152	FLASHER LAMP LENS	2F04
536273	PISTON ASSY	1D04
536275	PISTON ASSY	1D04
536514	EXHAUST MANIFOLD	1E13
536577	PLUG	1C02
536577	PLUG-DRAIN ENINE OIL	1C07
536577	PLUG	1C10
536577	PLUG	1C11
536577	PLUG	1D07
536577	PLUG	1D08
536577	PLUG	1E02
536577	PLUG-ENGINE OIL DRAIN	1E07
536577	PLUG	1E08
536577	PLUG	1E10
536577	PLUG-CYLINDER HEAD	1E11
536872	INLET CAM FOLLOWER RH	1D08
536873	INLET CAM FOLLOWER LH	1D08
536913	BARREL LOCK	2F09
536937	LUCRIMP CONNECTOR 3 WAY	1N08
536937	BULLET CONNECTOR	2F02
537229	OIL FILTER ASSEMBLY	1C12
537229	FILTER-OIL	1E12
537229	OIL FILTER ASSEMBLY	1E12
537269	PISTON ASSY	1D04
537271	PISTON ASSY	1D04
537685	SHACKLE PLATE	1J17
537686	PLATE	1J17
537687	PLATE	1J15
537734	SHACKLE PLATE INNER	1J18
537740	BOLT	1J18
537740	SHACKLE PIN	1J17
537741	SHACKLE PIN	1J15
537741	BOLT	1J16
537741	BOLT	1J17
537741	BOLT	1J17
537741	BOLT	1J18
537742	SHACKLE PIN	1J15
537742	BOLT	1J16
537763	BRAKE PIPE COMPLETE FRONT	1L09
537763	BRAKE PIPE	1L12
537778	SHACKLE PLATE OUTER	1J18
537791	CONTROL ROD	1012
537805	CLIP-TEE PIECE REAR BRAKE	1L09

PART NUMBER	DESCRIPTION	REF.NO.
537877	SPLIT BUSH	1K05
537964	MAIN LEAF	1J18
538038	JOINT WASHER	1C07
538038	GASKET FRONT COVER	1E08
538039	JOINT WASHER	1C07
538039	GASKET-FRONT COVER	1E08
538073	COVER	1C05
538073	COVER-CAMSHAFT-REAR	1E05
538131	THRUST WASHER	1C03
538131	WASHER THRUST	1E03
538132	THRUST WASHER	1C03
538132	WASHER THRUST	1E03
538133	THRUST WASHER	1C03
538133	WASHER THRUST	1E03
538134	THRUST WASHER	1C03
538134	WASHER THRUST	1E03
538499	JOINT WASHER DIAPHRAGM TO	1N07
538536	CONNECTOR	1H12
538616	GASKET	1L07
538671	JOINT WASHER	1C10
538671	GASKET-WATER PUMP	1E09
538768	DOUBLE CLIP FOR BRAKE PIPES	1L09
539572	WEIGHTS-DISTRIBUTOR	2E04
539575	SPINDLE-DISTRIBUTOR	2E04
539576	CLAMP-DISTRIBUTOR	2E04
539703	CROSS SHAFT	1J08
539706	PINION BEARING	1J08
539707	PINION BEARING	1J07
539718	SHIM	1J07
539720	SHIM	1J07
539722	SHIM	1J07
539724	SHIM	1J07
539741	HOUSING-SWIVEL PIN	1J05
539742	RAILKO BUSH	1J06
539745	WASHER	1J07
539787	CASING ASSEMBLY	1H09
539828	INTERMEDIATE GEAR	1H07
539887	LINK FOR TRANSFER SELECTOR SHAFT	1H13
539956	MAINSHAFT BEARING HOUSING ASSEMBLY	1H09
539993	FLANGE	1H10
540004	SPEEDOMETER WORM	1H08
540530	WASHER-PLAIN	1I11
540842	BOLT	1H12
540870	PLUG	1H03
541195	FLYWHEEL HOUSING	1G02

PART NUMBER	DESCRIPTION	REF.NO.
541215	GROMMET	1M09
541229	PLATE	1N13
541229	PLATE	1N13
541760	FLYWHEEL ASSEMBLY	1G02
541860	TUBE	1C07
541860	TUBE-DIPSTICK	1E07
541860	DIPSTICK TUBE	1E08
541910	CRANKSHAFT STD	1D04
541921	OIL SEAL	1D04
542036	SCREW & WASHER FOR STOP TAIL LAMP	2F03
542038	SCREW AND WASHER FOR FLASHER LAMP	2F04
542041	SPECIAL SCREW	2F03
542042	SPECIAL SCREW AND WASHER	2F04
542043	LENS	2F03
542045	BULB HOLDER	2F03
542048	LENS FOR FLASHER LAMP	2F04
542073	MUD EXCLUDER	1D09
542256	RIVET 0.125 DIA X 0.625 LONG	1D09
542396	OIL PUMP BODY	1D05
542410	CRANKCASE VENT UNIT	1C08
542425	SIDE ROCKER COVER	1D08
542492	OIL SEAL	1C03
542492	SEAL-OIL-REAR MAIN BEARING	1D04
542492	SEAL ASSY-OIL REAR MAIN	1E03
542494	OIL SEAL	1C03
542494	OIL SEAL AND RETAINER-	1D04
542494	SEAL ASSY-OIL REAR MAIN	1E03
542515	LOCKING PLATE FOR ADJUSTER	1L05
542600	SIDE COVER	1E09
542600	SIDE COVER ASSY	1C08
542601	STUD	1E09
542601	STUD	1C08
542622	KEY	1D04
542623	KEY	1D04
542762	BOSS	1010
542776	PIN	1010
542783	SPIRAL PIN	1010
542845	NUT	1N08
542845	NUT-FUEL PIPE	1N12
542846	OLIVE	1N08
542846	OLIVE-FUEL PIPE	1N11
542846	OLIVE-FUEL PIPE	1N12
542846	OLIVE-FUEL PIPE	1N13
542846	OLIVE-FUEL PIPE	1N13
542861	SPRING	1010

PART NUMBER	DESCRIPTION	REF.NO.
543108	'U' BOLT FRONT SPRING	1J15
543209	AIR CLEANER	1N02
543254	BRACKET	1D15
543275	DISTANCE PIECE	1L14
543281	PIN	1L14
543291	PLUNGER ROD	1L14
543292	PLUNGER ROD	1L14
543301	JACK HANDLE	2L11
543498	ANCHOR	1011
543546	RATCHET	1L14
543589	CLIP	1N17
543589	CLIP	2L14
543589	CLIP	2L15
543764	HOSE	1N14
543764	PIPE-FUEL FILLER	1N17
543765	HOSE	1N14
543766	PIPE	1002
543766	BREATHER PIPE-FUEL TANK	1003
543766	HOSE-FUEL TANK BALANCE	1004
543766	HOSE-FUEL TANK BALANCE	1006
543767	PIPE	1N14
543767	PIPE	1N15
543767	BREATHER HOSE	1N16
543767	BREATHER HOSE	1N17
543767	HOSE-BREATHER FUEL TANK	1004
543803	BOLT(0.3125 UNF X 1.50)	1002
543808	PLATE	1002
543818	STEM WASHER OUTER	1K08
543818	STEM FIXING WASHER STEERING DAMPER	1K07
543819	STEM WASHER INNER	1K08
543819	INTERMEDIATE STEM FIXING WASHER	1K07
543972	HOUSING FOR RELAY SHAFT	1K05
544337	BOLT SPECIAL	1K05
544389	DISTANCE PLATE	1N10
544573	LICENCE HOLDER	2G10
544581	DRAG LINK TUBE	1K07
544658	ELBOW	1002
544674	ELBOW	1002
545010	SWITCH	1C11
545010	SWITCH-THERMOSTAT	1D11
545010	SWITCH-WATER TEMPERATURE	1F06
545571	BEARING	1010
546026	RATCHET	1C04
546026	RATACHET-TIMING CHAIN	1E05
546177	ADAPTOR	1E11

PART NUMBER	DESCRIPTION	REF.NO.
546203	BREATHER FILTER	1D12
546210	CLIP	1D12
546211	CLIP	1C08
546211	CLIP-SPRING-FUEL BREATHER	1N14
546211	CLIP-SPRING-FUEL BREATHER	1N15
546211	HOSE CLIP	1N16
546211	CLIP-FUEL BREATHER PIPE	1004
546211	CLIP	2L12
546211	CLIP-HOSE	2L16
546277	BREATHER FILTER	1C08
546282	SLEEVE	1N10
546324	STARTING DOG	1D04
546440	FILLER CAP	1C08
546457	WASHER JOINT	1D08
546488	JOINT WASHER	1002
546488	JOINT WASHER	1004
546540	CLIP	1C08
546541	CLIP	1C08
546548	HOSE	1C08
546583	DIP STICK TUBE	1D08
546584	ADAPTOR	1D08
546588	HOSE	1C08
546590	UNION	1C08
546592	SIDE COVER-OIL FILLER PIPE	1C08
546798	TAPPET PUSH ROD	1C06
546799	PUSH ROD FOR VALVES	1E06
546841	JOINT WASHER SUMP	1C07
546841	GASKET-SUMP	1E07
546841	JOINT WASHER	1E08
547968	HOSE	1C08
548169	SPRING	1L04
548205	BUSH	1J15
548205	BUSH-ROAD SPRING	1J16
548205	BUSH-ROAD SPRING SHACKLE	1J17
548205	BUSH-ROAD SPRING SHACKLE	1J18
549168	PIVOT SHAFT	1H12
549169	BOLT	1H12
549200	SHIM	1H09
549201	PIVOT SHAFT	1H12
549229	NIPPLE	1J02
549229	NIPPLE-GREASE	1J03
549229	GREASE NIPPLE	1J04
549229	NIPPLE-GREASE	1J14
549230	SHIM	1J08
549232	SHIM	1J08

PART NUMBER	DESCRIPTION	REF.NO.
549234	SHIM	1J08
549236	SHIM	1J08
549238	SHIM	1J08
549240	SHIM	1J08
549242	SHIM	1J08
549244	SHIM	1J08
549246	SHIM	1J08
549248	SHIM	1J08
549250	SHIM	1J08
549252	SHIM	1J08
549473	CIRCLIP	1J11
549473	CIRCLIP	1J13
549475	NUT	1J10
549610	ADAPTOR	2E02
549610	ADAPTOR	2E03
549611	DISTRIBUTOR DRIVE COUPLING	2E02
549611	COUPLING DISTRIBUTOR DRIVE	2E03
549702	CUP PLUG	1C11
549761	FUEL PUMP-MECHANICAL	1N06
549840	SPANNER	2L11
549909	PLUG	1C04
549909	PLUG-OIL RELIEVE VALVE	1E04
549911	BUSH CRANKSHAFT	1F03
550732	MASTER CYLINDER	1G04
550732	CYLINDER-CLUTCH MASTER	2L12
551349	BATTERY LEAD TO SOLENOID	2F12
551436	SPECIAL SCREW	2F03
551508	SWITCH	2F09
551595	REAR REFLECTOR	2F05
551652	PIPE-BRAKE	1L09
551714	SHROUD FOR FAN COWL	2D02
551884	ATTACHMENT PLATE	2L02
552097	BELL CRANK LEVER ASSEMBLY	1008
552129	HINGE CENTRE	2I02
552132	BRACKET	2I02
552133	BRACKET	2H16
552133	BRACKET	2I02
552174	FUEL TANK	1002
552175	FUEL TANK	1002
552223	TORSION SPRING	1008
552388	STEERING DAMPER MOUNTING BRACKET RH STG	1K07
552407	BRAKE ROD	1L15
552435	PIPE TANK TO PUMP	1N11
552436	PIPE TANK TO PUMP	1N11
552436	FUEL PIPE	1N13

PART NUMBER	DESCRIPTION	REF.NO.
552436	FUEL PIPE	1N13
552517	INLET PIPE	1D10
552520	BRACKET-ACC PEDAL	1009
552524	BRACKET	1010
552526	CONTROL ROD	1010
552574	STEERING DAMPER MOUNTING BRACKET LH STG	1K07
552578	CROSS SHAFT	1L15
552583	RATCHET	1L14
552681	CLIP-FUEL PIPE	1N12
552681	CLIP	1N13
552681	CLIP	1N13
552720	HEAT SHIELD	2C10
552784	BRACKET ASSEMBLY	1010
552804	SPECIAL NUT	1K02
552805	DISTANCE PIECE	1L14
552818	BUSH	1J16
552819	BUSH FOR SHOCK ABSORBER	1J16
552856	PLUNGER	1L14
552857	WASHER	1L14
552858	SUPPORT PLATE	1L15
552975	BRACKET-ACC PEDAL	1009
552980	SHAFT AND LEVER	1010
552989	SHAFT AND LEVER	1010
553000	PROP SHAFT FRONT 4 CYL	1J02
553084	BLOCK	1H04
553084	BLOCK	1H06
554049	CLIP	1M08
554049	CLIP FIXING FUEL TRAP TO	2L17
554163	WASHER JOINT	1C08
554163	WASHER JOINT	1C09
554163	JOINT WASHER	1M04
554175	ADAPTOR	1M04
554260	CLIP WATER HOSE	1D09
554260	CLIP	1E12
554260	CLIP-BATTERY BOX TUBE	2G04
554260	CLIP	2L12
554260	CLIP	2L14
554260	CLIP	2L15
554260	CLIP-HOSE	2L16
554383	ELBOW	1N02
554414	CARB ELBOW	1C08
554418	HOSE	1N02
554423	CLIP FOR FUEL PIPE	1N11
554541	COVER ASSY	1C07
554541	FRONT COVER	1E08

PART NUMBER	DESCRIPTION	REF.NO.
554602	ROCKER BRACKET	1C06
554621	SET BOLT (0.50" UNF X 5.1875")	1C11
554832	TUBE-OIL LEVEL ROD	1D08
554834	OIL LEVEL ROD	1D08
554924	FRONT COVER ASSY	1D09
555711	GROMMET	1014
555711	GROMMET	2F15
555711	GROMMET-RUBBER-RED	2L09
555835	FUEL GAUGE	2F08
555837	IGNITION WARNING LIGHT LENS	2F08
555844	GAUGE UNIT	1002
555845	GAUGE UNIT	1002
555846	GAUGE UNIT	1002
555846	FUEL GAUGE UNIT	1004
555847	GAUGE UNIT	1002
555877	SWITCH	2F09
556010	3RD SPEED GEAR	1H04
556239	SPRING	1I03
556379	RETAINING PLATE	1H03
556445	SPIROLOX RING FOR FRONT AXLE	1J10
556449	PROP SHAFT FRONT 6 CYL	1J02
556508	BLEED SCREW-CLUTCH PIPE	1G05
556508	BLEED SCREW-CLUTCH CYLINDER	1G05
556508	SCREW-BLEED	1L03
556508	SCREW-BLEED	1L04
556508	BLEED SCREW	1L02
556570	PLUG FOR SELECTOR SPRING	1H03
556628	DISTANCE PIECE-FRONT AXLE	1J10
556633	WASHER-THRUST, CONCAVE	1I10
557523	LOCKER	1C04
557523	WASHER-LOCK	1D06
557523	WASHER-LOCK	1E05
557782	BANJO	1D11
558168	HOT PLUG	1E11
558302	OIL FEED PIPE TO CYLINDER HEAD	1D11
559128	LEAD	2F15
559141	LEAD	2F10
559168	CLIP	1N12
559563	PIN	1L14
559636	TOWING JAW AND PINTLE	2L03
559705	PLATE-EXHAUST MOUNTING TO PIPE	2C03
559705	MTG BRACKET FOR EXHAUST PIPE ϕ LHS	2C05
559705	PLATE-EXHAUST MOUNTING TO PIPE	2C10
559705	PLATE	2C11
560223	SPECIAL BOLT	1L06

PART NUMBER	DESCRIPTION	REF.NO.
560567	CABLE	2F12
560744	GAUGE PANEL COMPLETE	2F08
560746	WATER TEMPERATURE GAUGE	2F08
560794	WATER TEMP TRANSMITTER	1C11
560794	SWITCH-WATER THERMOSTAT	1D11
560794	SWITCH-WATER TEMPERATURE	1E11
560887	WHEELBOX FOR WIPER	2F06
560967	NUT PLATE	2F06
561195	STUD SHORT	1J02
561195	BOLT-SPECIAL	1J03
561195	BOLT-SPECIAL	1J12
561196	STUD LONG	1J02
561196	BOLT-SPECIAL	1J03
561196	BOLT-SPECIAL	1J12
561197	SHIM	1H07
561221	SPRING	1H12
561368	OIL CATCHER	1L05
561434	BOLT(0.375" WHIT X 1.90625)	1H03
561699	SEAL-OIL	1I09
561856	JOINT WASHER	1L05
561954	BUSH FOR REVERSE WHEEL	1H05
561954	BUSH-REVERSE GEAR	1H06
562019	PRESSURE GAUGE	2L11
562481	CLEVIS PIN	1013
562481	CLEVIS PIN FOR ACCELERATOR SHAFT	1012
562637	'U' BOLT	1J15
562641	'U' BOLT FRONT SPRING	1J15
562654	BRACKET	1D03
562670	BRACKET	1010
562717	SPRING	1010
562731	SILENCER RH STG	2C06
562731	SILENCER AND TAIL PIPE	2C07
562737	EXHAUST SILENCER	2C10
562763	HEAT SHIELD MTG BRKT BOTTOM	2C09
562781	HEAT SHIELD	2C10
562785	INTERMEDIATE EXHAUST PIPE	2C10
562823	PIPE CLAMP	2C10
562823	CLAMP	2C11
562858	FRONT EX PIPE	2C03
562875	SHAFT	1K05
562885	FRONT EXHAUST PIPE COMPLETE	2C10
562912	EXTERIOR MIRROR COMPLETE	2G07
562915	WATER HSE PUMP TO INLET PIPE	1D10
562940	GASKET-PEDAL BRACKET	1G04
562940	GASKET	1L06

PART NUMBER	DESCRIPTION	REF.NO.
562944	COWL FOR FAN	2D02
562953	'J' BOLT	2G04
562979	DRIVE SCREW	2D02
562979	DRIVE SCREW	2D03
563037	IMPELLOR	1D09
563038	JOINT WASHER	1D10
563047	WATER PIPE	1D03
563050	WEDGELOK SCREW	1D10
563122	THERMOSTAT	1D11
563132	FAN BELT	1C10
563132	BELT-FAN	1E09
563145	CHAIN WHEEL	1D06
563146	FUEL PUMP	1N10
563154	ADAPTOR	1D10
563165	PIPE	1N13
563165	PIPE	1N13
563166	PIPE	1N13
563166	PIPE	1N13
563167	PIPE	1N13
563167	PIPE	1N13
563168	PIPE	1N13
563168	PIPE	1N13
563190	FUEL FILTER	1N10
563195	UNION	1N10
564157	JOINT WASHER	1D10
564163	TIMING POINTER	1D09
564164	TUBE	1D09
564165	CONNECTOR	1D10
564197	WATER PUMP	1D09
564215	SUMP	1D08
564258	'O'RING ENGINE OIL FILLER CAP	1C12
564258	'O'RING-OIL FILLER CAP	1F10
564267	PULLEY	1D10
564270	HUB	1D09
564307	JOINT WASHER	1C13
564308	CLAMP	1C13
564308	CLAMP-EXHAUST MANIFOLD	1E13
564332	INJECTOR COMPLETE	1N10
564335	OIL PUMP COVER	1D05
564375	CRANKSHAFT PULLEY	1C03
564375	PULLEY-CRANKSHAFT	1E03
564394	FLYWHEEL HOUSING	1G02
564446	ADAPTOR	1M05
564447	WASHER	1N02
564456	SPRING	1C04

PART NUMBER	DESCRIPTION	REF. NO.
564456	SPRING-OIL RELIEVE VALVE	1E04
564463	CHAIN WHEEL	1D04
564467	BAFFLE PLATE	1E09
564470	TIMING POINTER	1E09
564495	DISTRIBUTOR PUMP	1N10
564574	STUD	1C11
564603	PIPE	1M05
564704	FRONT BUMPER	2G02
564718	OVERFLOW BOTTLE	2D02
564719	CAP FOR OVERFLOW BOTTLE	2D02
564720	HOSE RADIATOR TO OVERFLOW BOTTLE	2D02
564724	FLEXIBLE PIPE OVERFLOW BTLE OUTLET	2D02
564792	EXTENSION SHAFT	1010
564793	EXTENSION SHAFT	1010
564794	CONTROL ROD	1010
564797	CONTROL ROD	1010
564813	PEDAL SHAFT	1L06
564816	PEDAL BUSH	1L06
564825	WASHER SPRING	1K05
564893	PACKING PIECE	1N03
564898	PIPE	1N13
564898	PIPE	1N13
564899	PIPE	1N13
564899	PIPE	1N13
564902	PIPE	1N13
564902	PIPE	1N13
564905	PIPE	1N13
564905	PIPE	1N13
564907	PIPE	1N13
564907	PIPE	1N13
564911	BRACKET FOR ACCELERATOR CONTROL	1012
564944	PACKING PIECE	1L07
564944	PACKING PIECE	1L07
564962	PIPE	1N13
564962	PIPE	1N13
564999	JOINT WASHER FOR FILLER CAP	2D02
565434	PLUG SPANNER	2L11
565443	TOMMY BAR	2L11
565466	BRAKE PIPE MASTER CYLINDER	1L09
565656	HOSE CLIP	1N17
565656	CLIP ELBOW TO TEE PIECE	2K14
565656	CLIP	2L15
565668	CONNECTOR TUBE	1L07
565668	CONNECTOR TUBE BRAKE PIPE TO	1L07
565719	4 WAY CONNECTION FOR BRAKE	1L09

PART NUMBER	DESCRIPTION	REF.NO.
566222	RUBBER-ENGINE MOUNTING	1F02
566222	RUBBER-GEARBOX MOUNTING	1I05
566222	RUBBER-GEARBOX MOUNTING	1I05
566222	MOUNTING RUBBER	1I05
566426	ACCELERATOR CABLE	1013
566851	FLYWHEEL ASSEMBLY	1G03
566859	DISTRIBUTOR CAP	2E02
566957	BREATHER PIPE	1D09
567959	MOUNTING CLIP	2F09
568055	SWITCH-WATER TEMPERATURE	1F07
568189	PETROL PUMP ELECTRIC	1N08
568244	EARTHING BRAID STRIP UPPER	1N08
568244	EARTH STRIP	1N08
568301	SEAL-WATER PUMP	1D09
568333	CHAIN WHEEL	1C03
568333	CHAINWHEEL-CRANKSHAFT	1E03
568335	HEATER PLUG	1E11
568364	JOINT WASHER	1M05
568364	JOINT WASHER-CARBURETTER ADAPTOR	1M07
568364	JOINT WASHER FOR ADAPTOR	2L17
568365	JOINT WASHER	1M05
568365	JOINT WASHER-CARBURETTER ADAPTOR	1M07
568380	ADAPTOR	1N02
568391	HOSE	1D12
568392	CLIP	1D12
568431	RING GEAR	1G03
568457	ADAPTOR TEMP TRANSMITTER	1C11
568474	CHAINWHEEL FOR CAMSHAFT	1C05
568475	PUSH ROD	1D07
568542	COVER	1E09
568550	VALVE SPRING	1C06
568550	SPRING-VALVE	1E06
568575	OLIVE	1N12
568664	STUD	1C13
568664	STUD	1E13
568686	VALVE GUIDE-INLET	1C11
568687	VALVE GUIDE-EXHAUST	1C11
568688	VALVE GUIDE ASSEMBLY	1E11
568689	VALVE GUIDE ASSEMBLY	1E11
568725	COVER ASSEMBLY	1D12
568786	EXHAUST VALVE	1D07
568788	PULLEY ALTERNATOR 2.25 LITRE	2E10
568788	PULLEY-ALTERNATOR	2E14
568789	ALTERNATOR ADJUSTING LINK	2E11
568789	LINK-ALTERNATOR ADJUSTING	2E15

PART NUMBER	DESCRIPTION	REF.NO.
568802	SUPPORT FOR FUEL TANK	1005
568805	AIR CLEANER	1N03
568858	RUBBER BUSH	1K08
568858	STEM RUBBER FOR STEERING DAMPER	1K07
568883	SPINDLE-CLUTCH PEDAL	1G04
568883	TRUNNION	1L06
568893	PEDAL & BRACKET ASSEMBLY	1G04
568894	PEDAL & BRACKET ASSEMBLY	1G04
568895	PEDAL AND BUSHES	1G04
568896	PEDAL AND BUSHES	1G04
568916	COWL FOR FAN	2D02
568917	SHROUD FOR FAN COWL	2D02
569005	STEERING DAMPER	1K07
569028	'U' BOLT	1J15
569047	PLUG-WATER DRAIN	1C02
569047	PLUG-WATER DRAIN	1E02
569047	DRAIN PLUG FOR RADIATOR	2D02
569054	BRAKE PEDAL & BRACKET ASSY	1L06
569055	PEDAL BRACKET	1L06
569057	PEDAL BRACKET	1L06
569058	BRACKET	1L06
569084	BRAKE PEDAL & BRACKET ASSY	1L06
569085	PEDAL BRACKET	1L06
569086	PEDAL & BUSHES	1L06
569096	NYLON SPACER	1L07
569096	SPACER FOR MASTER CYLINDER	1L07
569117	END STOP	1L06
569117	END STOP-SWITCH TO HANDBRAKE	2L13
569201	SWITCH PROTECTOR PLATE	1L06
569204	WHEEL-ROAD	1J18
569212	SHROUD FOR FAN COWL	2D02
569291	SPRING	1L06
569291	SPRING-BRAKE-PEDAL RETURN	2L13
569338	SERVO UNIT	1L07
569339	CYLINDER-BRAKE MASTER	1L07
569434	PIPE	1L07
569492	GROMMET	2K14
569522	PACKING PIECE	1K04
569584	SWITCH LEVER	1L06
569601	PEDAL BRACKET	1L06
569606	BRACKET	1L06
569609	NYLON BUSH	1L06
569609	BUSH-STOP LIGHT MOUNTING	2L13
569652	PEDAL & BRACKET ASSEMBLY	1L06
569652	BRAKE PEDAL AND BRACKET	2L13

PART NUMBER	DESCRIPTION	REF.NO.
569687	WHEEL NUT WRENCH	2L11
569693	FRONT EXHAUST PIPE	2C10
569701	SPRING-CLUTCH PEDAL	1G04
569701	RETURN SPRING	1L06
569701	SPRING-CLUTCH PEDAL	2L12
569746	BUSH SPRING	1J15
570091	PIPE-BRAKE REAR TO TEE PIECE	1L09
570351	CLIP CUTOUT SWITCH CAPILLARY TUBE	2F06
570753	FLANGE FINISHER	2H02
570753	FLANGE FINISHER	2H05
570753	FLANGE FINISHER	2H07
570822	BULB	2F03
570822	BULB-NUMBER PLATE LAMP	2F04
571043	SELECTOR PAD	1I12
571059	SEAL	1H03
571059	SEAL-OIL-GEARBOX	1H04
571059	SEAL-OIL	1I03
571059	SEAL-OIL	1I06
571062	BEARING-ROLLER	1I06
571063	WASHER-THRUST	1I06
571064	BEARING-THRUST	1I06
571065	WASHER-THRUST	1I06
571066	WASHER-THRUST GEARBOX	1I06
571067	BEARING-THRUST GEARBOX	1I06
571090	CIRCLIP	1I06
571134	SPINDLE	1I03
571137	GASKET-FRONT COVER AND OIL PUMP	1I03
571139	RETAINER	1I03
571142	SEAL-OIL	1I06
571144	CIRCLIP	1I09
571144	CIRCLIP	1I09
571145	ROLL PIN	1H11
571145	ROLL PIN	1I12
571146	BALL-STEEL	1I10
571146	BALL-STEEL	1I12
571158	ROLL-PIN	1I10
571158	ROLL PIN	1I12
571160	PUSH ROD-CLUTCH CYLINDER	1G05
571161	INSERT CLUTCH RELEASE LEVER	1G05
571163	CLIP CLUTCH RELEASE LEVER	1G05
571164	CAP-CLUTCH RELEASE LEVER	1G05
571164	CAP CLUTCH RELEASE LEVER PIVOT	1H03
571168	PLUG	1I03
571174	WASHER-PLAIN	1I10
571175	SEAL-OIL	1I10

PART NUMBER	DESCRIPTION	REF.NO.
571177	EXCLUDER-MUD	1I10
571187	BEARING-ROLLER	1I06
571235	DRIVING MEMBER	1J10
571439	SPRING	1I12
571447	BOLT	1J04
571452	SHIM	1I06
571453	SHIM	1I06
571454	SHIM	1I06
571455	SHIM	1I06
571468	WASHER-SPACING	1I11
571661	TOLERANCE RING	1H11
571665	SEAL-OIL	1I11
571682	CIRCLIP	1I11
571711	DRIVING MEMBER	1J10
571711	DRIVING MEMBER	1J11
571711	DRIVE MEMBER-REAR AXLE	1J13
571718	SEAL-OIL	1J05
571723	WASHER-PLAIN	1I04
571723	WASHER-THRUST	1I06
571732	SLEEVE-EXTENSION-FRONT COVER	1I03
571770	INNER MEMBER TRANSFER CHANGE SPEED	1H07
571837	JOINT WASHER	1I04
571838	SEAL-OIL	1I06
571841	GASKET-GEARBOX SIDE COVER	1I04
571846	GASKET-REAR MAIN BEARING HOUSING	1I04
571855	SELECTOR ROD	1H12
571875	LOCK-UP DOG-TRANSFER BOX	1I10
571876	GASKET	1I05
571885	WASHER-THRUST	1I09
571885	WASHER-THRUST	1I09
571922	WASHER	1J10
571930	WASHER-THRUST	1I06
571931	WASHER-THRUST GEARBOX	1I06
571940	GASKET-REAR COVER	1I05
571944	PLUG-GEARBOX	1I04
571947	HOUSING-VACUUM ACTUATOR	1I05
571956	SELECTOR FORK	1I10
571957	VACUUM ACTUATOR	1I10
571959	HOUSING-VACUUM ACTUATOR	1I05
571962	PLUNGER-SELECTOR-SHAFT	1I12
571969	WASHER-PLAIN-SPECIAL	1I05
571970	SHIELD-OIL	1I11
571971	CATCHER-OIL-TRANSMISSION	1I05
571977	COVER-BOTTOM-TRANSFER CASING	1I04
571979	GASKET-TOP COVER	1I05

PART NUMBER	DESCRIPTION	REF.NO.
571980	PIN-DETENT SPRING	1I12
571981	SHAFT-GEAR CHANGE	1I12
571982	LEVER-GEAR SELECTOR	1I12
571983	LEVER-GEAR SELECTOR	1I12
571991	SEAL-OIL	1I10
572166	RUBBER BUSH	2C11
572167	RUBBER BUSH	2C11
572168	INSULATING WASHER	2C11
572313	DISTANCE TUBE	2D03
572535	ADAPTOR	1N08
572535	REDUCER ADAPTOR FOR FUEL PIPES	1N08
572541	HOSE CLIP	1N05
572548	CORBIN CLIP	1L07
572772	HOSE PIPE TO MASTER CYLINDER	1L07
572839	HOSE CLIP FUEL PIPES	1N11
572839	CLIP-FUEL PIPE HOSE	1N12
572839	HOSE CLIP	1N14
572839	HOSE CLIP-FUEL BREATHER PIPE	1N17
572839	CLIP-BREATHER HOSE	1003
572839	HOSE CLIP-FUEL BREATHER PIPE	1004
572839	CLIP-BREATHER HOSE	1006
572839	CLIP-BREATHER CONNECTION	2L14
572839	CLIP	2L15
572994	TRUNNION PIN	1N04
573038	IGNITION COIL	2F09
574044	FAN BLADE	1D10
574048	STUD	1C13
574048	STUD	2L12
574262	CONNECTING PIPE	1C08
574264	BRACKET	1C08
574654	CLIP	1E12
574656	CONNECTING TUBE	1E13
574658	BREATHER FILTER	1E12
574661	INLET MANIFOLD	1E13
574749	ADAPTOR ASSEMBLY	1C08
574750	HOSE	1C08
574855	BRACKET-ALTERNATOR FIXINGS	2E15
574855	MOUNTING BRACKET FOR ALTERNATOR	2E11
574871	HOSE	1C10
574871	HOSE-WATER	1E10
574878	RUBBER SLEEVE-SUCTION PIPE	1M04
574878	CONNECTOR-RUBBER-VACUUM PIPE	1M05
574948	SPACER FRONT COVER	1E08
574948	SPACER ALTERNATOR ADJUSTING LINK	1C07
575014	SPRING WASHER	2F12

PART NUMBER	DESCRIPTION	REF.NO.
575047	OUTER CASING	2F06
575092	LEAD COIL TO CARBURETTER SOLENOID	2L12
575123	FLASHER LAMP COMPLETE	2F04
575125	FLASHER LAMP COMPLETE	2F04
575146	SWITCH	2F15
575166	MECHANICAL STOP SWITCH	1L06
575166	SWITCH-STOP LIGHT-MECHANICAL	2L13
575312	BULB	2F04
575373	MAIN HARNESS RHD	2F10
575383	INDICATOR HEADLAMP DIP AND	2F09
575390	BRKT FOR COMBINED SWITCHES	2F09
575395	FUSE UNIT BOX	2F09
575396	FUEL LEVEL WARNING LIGHT	2F07
575408	MAIN HARNESS LHD	2F10
575437	WIPER BLADE	2F06
575457	FRONT FLASHER LAMP	2F04
575651	BRACKET-GEARBOX MOUNTING	1I05
575651	MOUNTING BRACKET	1I05
575718	TOP HOSE	2D04
576137	CLUTCH RELEASE LEVER ASSY	1G05
576149	RETAINER	1I12
576149	RETAINER	1I12
576159	PIN	1J07
576195	GASKET-GEAR TOP COVER	1I04
576201	LOW GEAR WHEEL	1H07
576203	STAPLE CLUTCH LEVER TO	1G05
576209	OUTER MEMBER-TRANSFER CHANGE SPEED	1H07
576210	TRANSFER GEAR CHANGE LEVER	1H13
576220	FILTER-OIL-GEARBOX	1I04
576236	SHIM	1J08
576237	SHIM	1J08
576238	SHIM	1J08
576239	SHIM	1J08
576316	KNOB	1H11
576319	BOLT-SPECIAL	1I13
576320	PLUG-RETAINING GEAR LEVER	1I13
576340	OIL PUMP AND FRONT COVER	1I03
576342	GEAR AND SPINDLE-OIL PUMP	1I03
576343	LAYSHAFT CLUSTER	1I09
576351	SHIM	1I09
576352	SHIM	1I09
576353	SHIM	1I09
576354	SHIM	1I09
576355	SHIM	1I09
576356	SHIM	1I09

PART NUMBER	DESCRIPTION	REF. NO.
576357	SHIM	1I09
576358	SHIM	1I09
576359	SHIM	1I09
576360	SHIM	1I09
576361	SHIM	1I09
576362	SHIM	1I09
576363	SHIM	1I09
576364	SHIM	1I09
576365	SHIM	1I09
576366	SHIM	1I09
576367	SHIM	1I09
576368	SHIM	1I09
576369	SHIM	1I09
576370	SHIM	1I09
576476	COVER-CLUTCH	1G03
576521	BOLT(0.375 BSF X 1.375)	1J05
576521	BOLT-SPECIAL	1L02
576521	BOLT	1L04
576522	BOLT 0.375 BSF X 1.50"	1J05
576557	CLUTCH COVER COMPLETE	1G02
576557	CLUTCH COVER	1G03
576583	SWIVEL PIN UPPER COMPLETE	1J06
576627	HUB-OUTPUT GEAR	1I11
576656	LEVER-SELECTOR	1I12
576683	BEARING-INTERMEDIATE GEARS	1I09
576686	LAYSHAFT CLUSTER-ALL SYNCHRO GEARBOX	1H05
576703	FORK	1H11
576704	FORK	1H11
576707	REVERSE GEAR	1H05
576714	BELL HOUSING	1H02
576717	SERRATED BOLT-0.3125 cBSF X 2 LONG	1H03
576718	FRONT COVER ASSY GEARBOX	1H03
576720	PIVOT-CLUTCH RELEASE	1G05
576720	PIVOT PIN CLUTCH RELEASE	1H03
576723	CLIP	1G05
576724	JOINT WASHER G/BOX FRT COVER	1H03
576725	MAINSHAFT	1H04
576726	MAINSHAFT	1H04
576729	SELECTOR SHAFT	1H11
576730	R GEARBOX ASSEMBLY REBUILT	1H02
576734	BUSH	1H04
576735	THRUST WASHER	1H04
576751	PUSH ROD SLAVE CYLINDER	1G05
576761	R GEARBOX ASSEMBLY REBUILT	1H02
576762	BELL HOUSING	1H02

PART NUMBER	DESCRIPTION	REF.NO.
576767	HALF SHAFT	1J13
576768	HALF SHAFT	1J13
576777	HALFSHAFT AND JOINT RH FOR	1J05
576778	HALFSHAFT AND JOINT LH FOR	1J05
576779	ROLL-PIN	1I12
576825	STUD	1J10
576825	STUD	1J11
576825	STUD	1J13
576843	BAFFLE-GEARBOX BREATHER	1I05
576844	HUB ASSEMBLY	1J10
576844	HUB-REAR	1J13
576895	LOCK TAB	1J07
576907	DISTANCE PIECE FOR BEARING	1H05
576973	BRAKE DRUM	1L04
576973	BRAKE DRUM	1L03
576974	BRAKE DRUM	1L03
577020	BATTERY FRAME	2G04
577095	OPERATING LEVER HAND CONTROL	1014
577098	BASE PLATE FOR HAND CONTROL	1014
577111	KNOB FOR HAND CONTROL	1014
577127	SHFT LEVER FOR HAND-CONTROL	1014
577137	SHAFT HAND BRAKE LEVER	1L15
577138	WASHER PLATE	1L15
577230	CNTRL ROD PEDAL TO RELAY AND ENGINE	1008
577258	BRACKET FOR ACCELERATOR CONTROLS	1008
577262	BRACKET FOR STG COLUMN MTG	1K04
577271	BOLT SELF LOCK STEERING UNIT	1K04
577272	BOLT SELF LOCK STEERING UNIT	1K04
577304	ACCELERATOR RELAY SHAFT	1007
577304	SHAFT-ACCELERATOR LEVERS	1011
577338	SEALING PAD FOR HAND-CONTROL	1014
577342	COWL FOR FAN	2D02
577346	HOSE FOR RADIATOR TOP	2D02
577354	WASHER	1L15
577383	RADIATOR BLCK ASSY-(LESS-COWL)	2D02
577384	PROTECTION PLATE FOR PIPE	2K14
577384	PLATE-FUEL PIPE PROTECTION	2L15
577414	CROSSMEMBER NO 3 ASSEMBLY	2G02
577458	RUBBER ELBOW JOINING PIPES	1N17
577458	ELBOW-RUBBER	2L14
577458	ELBOW-RUBBER-JOINING PIPES	2L15
577459	RUBBER CONNECTION	2K14
577464	ELBOW	2K14
577464	ELBOW	2L15
577465	CONNECTOR	2K14

PART NUMBER	DESCRIPTION	REF.NO.
577465	CONNECTOR	2L15
577466	BREATHING HOSE	2K14
577466	HOSE-BREATHING	2L15
577472	DUST SHIELD FOR OUTER COLUMN	1K02
577609	RADIATOR 4 CYLINDER	2D02
577664	PIPE SUPPLY TANK TO BRAKE	1L07
577664	PIPE-SUPPLY TANK TO BRAKE	1L07
577665	PIPE-SUPPLY TANK TO BRAKE	1L07
577665	PIPE-SUPPLY TANK TO MASTER	1L07
577679	BRAKE PIPE RH JUMP HOSE TO	1L09
577681	BRAKE HOSE FRONT	1L09
577687	BRAKE PIPE COMPLETE CLUTCH MASTER	1G04
577694	PIPE-MASTER CYLINDER TO	1L07
577695	PIPE-MASTER CYLINDER TO	1L07
577697	MOUNTING BRACKET-JUMP HOSE	1L09
577697	MOUNTING BRACKET	1L10
577697	MOUNTING BRACKET	1L11
577697	BRACKET-JUMP HOSE	1L12
577697	MOUNTING BRACKET	1L13
577844	HOSE-SERVO TO MANIFOLD	1L07
577846	SHIELD-HEAT RH	1F02
577874	STEADY STRIP FOR SHROUD	2D02
577898	CLIP FOR TIE ROD BALL JOINT	1K06
577898	CLIP-STEERING TUBES	1K07
577898	CLAMP	1K08
577927	CLIP FOR TRACK ROD	1K06
578023	SPECIAL NUT 0.25" UNF	1N04
578086	HOSE-SERVO TO MANIFOLD-LHSTG	1L07
579006	WIPER WASHER SWITCH	2F09
579014	CABLE PETROL PUMP FEED	2F10
579023	WARNING LIGHT DIRECTION INDICATORS	2F07
579025	LEAD FOR SOLENOID SWITCH	2F12
579027	SWITCH WIPER	2F09
579054	LEAD FOR ROOF LAMP RH STG	2F06
579058	LEAD FOR ROOF LAMP LH STG	2F06
579121	INSPECTION LIGHT SOCKET RED	2F09
579122	INSPECTION LIGHT SOCKET BLACK	2F09
579198	SPEEDOMETER MPH	2F08
579243	LEAD TO DISTRIBUTOR	2F10
586440	CLIP PIPE	1F10
586742	SWITCH-OIL PRESSURE	1F05
587001	SHIELD	2E04
587077	MTG BRKT REAR FOR ALTERNATOR 2-LITRE	2E13
587078	MTG BRKT FRONT FOR ALTERNATOR	2E13
587080	SPACER FOR ALTERNATOR BRKT	2E13

PART NUMBER	DESCRIPTION	REF.NO.
587095	SHIELD	2C02
587104	HOSE FLAME TRAP TO CARBURETTER	1D09
587105	HOSE	1D09
587119	CLIP-HOSE	2L16
587119	CLIP PIPE TO ROCKER COVER	2L12
587120	HOSE ELBOW TO FLAME TRAP	2L16
587338	SET BOLT 0.4375UNF X 5.15625	1D12
587339	PLAIN WASHER-CYL HEAD BOLT	1D12
587401	EXHAUST MANIFOLD ASSY	1D13
587405	PLAIN WASHER	1C13
587433	ADJUSTING LINK FOR	2E13
587463	WATER OUTLET PIPE 2 6 LITRE	1D11
587468	DRIVING BELT	1D10
587499	MOUNTING BRACKET FOR VACUUM SWITCH	2L15
587502	BANJO BOLT	1C13
587502	BANJO BOLT	2L15
587517	SERVO ADAPTOR	2L15
587522	PULLEY FOR ALTERNATOR 2 6 LITRE	2E12
587622	SUPPORT PLATE	1G04
587628	CUP PLUG	1C02
587628	CORE PLUG	1E02
587653	AIR CONTROL VALVE.	1N06
587659	FUEL PIPE FILTER TO CARBURETTER	1N12
587684	FUEL PIPE PETRO-FLEX PIPE	1N11
587686	FUEL PIPE AND CONNECTION	1N11
587723	PLUG 0.50 UNF	1D13
587726	STUD INLET MANIFOLD	1C13
587923	PLUG	1D08
587986	HOSE BREATHER TO THROTTLE BODY	1E12
589018	CABLE ASSEMBLY	2F04
589026	CABLE ASSY NO PLATE LAMP	2F04
589033	CABLE ENGINE HARNESS	2F10
589034	CABLE ENGINE HARNESS DIESEL	2F11
589035	CABLE ENGINE HARNESS	2F10
589063	SWITCH-HANDBRAKE	2L13
589115	BRACKET FOR CHOKE CONTROL	1014
589202	LENS-FLASHER-REAR	2F04
589208	SADDLE-BRKT FOR STARTER-SWITCH	1014
589210	LEAD SHUTTLE VALVE SWITCH	2L13
589219	SWITCH,VACUUM LOSS	2F13
589219	VACUUM LOSS SWITCH	2L13
589223	SWITCH,PEDAL TRAVEL	2F13
589283	SIDE LAMP LENS	2F03
589284	SIDE LAMP LENS	2F03
589285	FRONT FLASHER LAMP LENS	2F04

PART NUMBER	DESCRIPTION	REF.NO.
589289	CLIP	2L08
589403	SIDE LAMP COMPLETE	2F03
589404	SIDE LAMP COMPLETE	2F03
589409	FRONT FLASHER LAMP COMPLETE	2F04
589414	LAMP-FLASHER-REAR	2F04
589419	STOP TAIL LAMP	2F03
589420	LENS FOR STOP TAIL LAMP	2F03
589446	STOP/TAIL LAMP COMPLETE	2F03
589448	STOP/TAIL LAMP LENS	2F03
589452	GROMMET	2L09
589553	STRIKER ASSEMBLY	1K02
589665	RELAY-STARTER	2F09
589665	RELAY	2F13
589705	CABLE ASSEMBLY CHASSIS HARNESS	2F10
589706	CABLE ASSEMBLY CHASSIS HARNESS	2F10
589707	CABLE ASSEMBLY CHASSIS HARNESS	2F10
589708	CABLE CHASSIS HARNESS	2F11
589709	CABLE CHASSIS HARNESS	2F11
589710	CABLE CHASSIS HARNESS	2F11
589806	CLIP	1G04
589806	CLIP-PIPE	1N12
589812	STOP TAIL LAMP	2F03
589812	LAMP-STOP TAIL	2F03
589851	CABLE ENGINE HARNESS	2F10
589853	CABLE ENGINE HARNESS	2F10
589872	HEAVY CABLE BATTERY-EARTH NEGATIVE	2F12
589877	REFLECTOR	2F05
589878	LEAD STARTER MOTOR TO EARTH	2F12
591039	BRAKE DRUM	1L04
591039	BRAKE DRUM 88	1L02
591231	SLAVE CYLINDER	1G05
591278	PROPELLOR SHAFT	1J03
591279	REAR PROPELLOR SHAFT	1J14
591283	REAR PROPELLOR SHAFT	1J14
591290	PLUG-CUP	1I04
591320	SPRING	1I12
591345	WASHER-PLAIN	1I10
591362	GEAR 1ST MAINSHAFT	1H04
591363	2ND SPEED GEAR	1H04
591364	SYNCHRO CONE	1H04
591378	AXLE SHAFT	1J12
591379	AXLE SHAFT	1J12
591394	RING-OIL FEED	1I03
591429	REAR OUTPUT SHAFT	1H07
591519	SPRING PIN-REVERSE GEAR SHAFT	1H05

PART NUMBER	DESCRIPTION	REF.NO.
591527	SHAFT FOR REVERSE GEAR	1H05
591603	SOUND DEADNING-G/BOX TOP COV	1I05
591891	GEAR-LOW RANGE	1I09
591900	WASHER-THRUST	1I09
591988	BACKING PLATE SEALING GASKET	1G05
592177	PLATE BOTTOM-ROAD SPRING	1J16
592179	PLATE-BOTTOM-ROAD SPRING	1J18
592179	BOTTOM PLATE	1J17
592182	'U' BOLT	1J17
592183	U BOLT	1J18
592184	U BOLT	1J16
592185	U BOLT	1J16
592219	JACK ROD	2L11
592269	DISTANCE PLATE-FUEL FILTER	1N09
592269	DISTANCE PIECE-FILTER BOWL	2L15
592306	DISTANCE PIECE	1007
592306	PCKNG-ACCELERATOR X-SHAFT	1011
592309	FUEL PIPE PUMP TO FILTER	1N12
592324	NYLON FILTER FOR SUPPLY TANK	1L07
592324	FILTER	1L08
592324	FILTER-BRAKE FLUID RESERVOIR	2L13
592325	FILTER-NYLON-SUPPLY TANK	1L07
592325	FILTER-NYLON-SUPPLY TANK	1L07
592326	PETROL CATCH TANK	2K14
592326	TANK	2L15
592358	GASKET-MASTER CYLINDER	1G04
592358	GASKET-BRAKE MASTER CYLINDER	1L07
592358	GASKET BRAKE AND CLUTCH	1L07
592358	GASKET-CLUTCH MASTER	2L12
592364	BRAKE PIPE COMPLETE TO FRONT	1L09
592374	PIPE-LH REAR TO TEE PIECE	1L09
592375	PIPE-RH REAR TO TEE PIECE	1L09
592564	MOUNTING PLATE	1L06
592564	STOP LIGHT MOUNTING PLATE	2L13
592567	SPRING	1L06
592567	SPRING FOR MOUNTING PLATE	2L13
592592	CROSSMEMBER NO 4 109 4 CYL	2G02
592594	CROSSMEMBER NO 4 109 6 CYL	2G02
592774	PROTECTION PAD	2G02
592778	FLEXIBLE MOUNTING	2C03
592778	MOUNTING-RUBBER-EXHAUST PIPE	2C04
592778	FLEXIBLE MOUNTING	2C05
592778	RUBBER-MOUNTING EXHAUST	2C06
592778	MOUNTING-RUBBER-EXHAUST	2C07
592778	MOUNTING-RUBBER-EXHAUST	2C08

PART NUMBER	DESCRIPTION	REF.NO.
592778	MOUNTING-RUBBER-EXHAUST	2C10
592778	FLEXIBLE MOUNTING	2C11
592903	CNTRL ROD FOR HAND-CONTROL	1014
592904	LEVER ASSY FOR HAND-CONTROL	1014
592956	PACKING PIECE STG COLUMN MTG	1K04
592984	STEERING COLUMN MOUNTING	1K04
592985	STG COLUMN MTG BRACKET LH	1K04
593619	BEARING-BALL	1I06
593619	BEARING-BALL	1I06
593664	BRACKET	1G05
593692	BOLT 0.375 UNF X 1.125 cLONG	1J08
593693	WASHER	1J08
593694	SHIM	1I11
593695	SHIM	1I11
593696	SHIM	1I11
593697	SHIM	1I11
593698	SHIM	1I11
593699	SHIM	1I11
593700	SHIM	1I11
593701	SHIM	1I11
593702	SHIM	1I11
593703	SHIM	1I11
593704	SHIM	1I11
593705	SHIM	1I11
593706	SHIM	1I11
593707	SHIM	1I11
593708	SHIM	1I11
593709	SHIM	1I11
593710	SHIM	1I11
593711	SHIM	1I11
593712	SHIM	1I11
593713	SHIM	1I11
593714	SHIM	1I11
593715	SHIM	1I11
593716	SHIM	1I11
593717	SHIM	1I11
593802	SPRING	1I10
593802	SPRING	1I12
593814	SHIM	1I06
593815	SHIM	1I06
593816	SHIM	1I06
593817	SHIM	1I06
593818	SHIM	1I06
593819	SHIM	1I06
593820	SHIM	1I06

PART NUMBER	DESCRIPTION	REF.NO.
593821	SHIM	1I06
593981	SELECTOR-GEAR CHANGE	1I12
593983	BUSH-GEAR LEVER EXTENSION	1I12
593991	SELECTOR	1I12
594018	WASHER-THRUST	1H04
594018	SHIM	1I06
594019	WASHER-THRUST	1H04
594019	SHIM	1I06
594020	WASHER-THRUST	1H04
594020	SHIM	1I06
594021	WASHER-THRUST	1H04
594021	SHIM	1I06
594022	SHIM	1I06
594023	SHIM	1I06
594024	SHIM	1I06
594026	SEAL-TRANSMISSION BRAKE	1L05
594029	SEAL-OIL	1I11
594087	SEAL-BELL HOUSING COVER	1I03
594089	SHAFT-SELECTOR	1I12
594091	DUST CAP FOR BLEED SCREW	1G05
594104	NUT	1J06
594134	BOLT-SPECIAL	1I03
594150	PLATE	1H11
594195	INTERMEDIATE GEAR SHAFT	1H07
594244	GEAR-REVERSE IDLER	1I09
594290	BEARING ROLLER	1I09
594291	BEARING-ROLLER	1I06
594292	BEARING-ROLLER	1I06
594312	FRONT AXLE ASSEMBLY LESS	1J03
594320	COVER-SIDE-GEARBOX	1I04
594322	HALF SHAFT COMPLETE RH	1J05
594323	HALF SHAFT COMPLETE LH	1J05
594338	SHAFT-REAR OUTPUT	1I11
594340	DIFFERENTIAL COMPLETE-GEARBOX	1I10
594349	REAR AXLE ASSEMBLY LESS	1J12
594361	FRONT PROPELLER SHAFT 6 CYL	1J03
594389	BEARING-ROLLER-REVERSE GEAR	1I09
594486	DIFFERENTIAL CASE	1J08
594487	DIFFERENTIAL CASE	1J08
594493	CROWN WHEEL AND PINION	1J08
594505	OUTER COLUMN	1K02
594506	INNER COLUMN RH STG	1K02
594507	INNER COLUMN LH STG	1K02
594594	"TYRAP" STRAP	2K14
594594	"TYRAP" STRAP	2L15

PART NUMBER	DESCRIPTION	REF.NO.
594619	PIPE-REAR BRAKE	1L09
594664	CHASSIS FRAME 4 CYL 1 TON	2G02
594742	BRACKET FOR SHUTTLE VALVE	2L12
594747	BRAKE PIPE, VALVE TO RR HOSE	2L12
594748	BRAKE PIPE, VALVE TO RR HOSE	2L12
594752	PIPE, VALVE TO LHF	2L12
594753	HOSE CLIP	1N02
594753	CLIP-AIR CLEANER PIPE	1N03
594753	HOSE CLIP-FUEL FILLER	1N14
594753	HOSE CLIP	1N15
594753	HOSE CLIP-FUEL FILLER	1N16
594753	HOSE CLIP-FUEL FILLER PIPE	1N17
594774	HEAT SHIELD MTG BRKT TOP	2C09
594776	BLEED PIPE	1G05
594822	ADAPTOR	1G05
594938	FIXING PLATE FOR 3 WAY PIPE	1L09
594943	FUEL PIPE TANK TO PUMP	1N12
595119	MOUNTING BRACKET	1I05
595119	BRACKET-GEARBOX MOUNTING	1I05
595123	STEERING DROP ARM	1K02
595336	WHEEL NUT WRENCH 1.0625 AF	2L11
595339	PIPE-FUEL	1N08
595339	FUEL PIPE PUMP TO FILTER	1N12
595340	FUEL PIPE	1N08
595340	PIPE-FUEL	1N12
595396	REMOTE BREATHER PIPE	1J02
595396	REMOTE BREATHER PIPE	1J03
595469	DRAG LINK DAMPER BRACKET	1K07
595473	REMOTE BREATHER PIPE	1J12
595478	BOLT-BANJO	1I05
596000	INLET MANIFOLD	1C13
596000	INLET MANIFOLD ASSEMBLY	2L12
596069	PLUG	1C13
596097	STUD	1D13
596097	STUD	1E02
596097	STUD FOR CYLINDER HEAD	1E11
596225	THERMOSTAT	1C10
596225	THERMOSTAT	1E10
596384	DIAPHRAGM UNIT	1C14
596384	DIAPHRAGM	2L12
596385	TRIGGER VALVE	2L12
596387	BANJO RING ASSEMBLY	2L15
596438	PIPE VALVE TO INLET PIPE	2L12
596445	ADAPTOR ASSEMBLY	2L12
596490	LOCKING PLATE EXH MANIFOLD	1C13

PART NUMBER	DESCRIPTION	REF.NO.
596493	CLIP-COLD START	1M06
596495	ELBOW	1N02
596691	CARBURETTER ELBOW	2L12
596717	ADAPTOR	1N06
596955	INLET MANIFOLD	1C13
597563	BANJO BOLT	1C11
597563	BOLT-BANJO	1E11
597586	CUP PLUG FOR CYLINDER BLOCK	1C02
597586	CUP PLUG	1E02
597722	ADAPTOR ASSY OIL FILTER	1D13
598006	BLANKING PLATE CYLINDER HEAD	1C11
598006	PLATE-CYLINDER HEAD	1D11
598046	CUP PLUG	1D11
598056	ENGINE STOP LEVER	1N10
598064	HUB FOR FAN	1C10
598064	HUB-FAN PULLEY	1E09
598104	EXHAUST MANIFOLD	1E13
598110	CARBURETTER COMPLETE	1M05
598127	CLIP REAR	2L12
598128	CLIP FRONT	2L12
598197	STUD	1C13
598197	STUD	2L12
598214	OIL PUMP SHAFT	1D05
598231	OIL FILLER CAP	1C08
598231	CAP-ENGINE OIL FILLER	1D08
598231	CAP-OIL FILLER	1E09
598318	PIPE MANIFOLD TO TRIGGER VALVE	2L15
598354	HOUSING-OIL FILTER	1E12
598380	PIPE	1C14
598380	PIPE TRIGGER VALVE TO DIAPHRAGM	2L15
598473	EXHAUST MANIFOLD	1C13
598473	EXHAUST-MANIFOLD	2L12
598483	WATER PUMP	1D10
598483	WATER PUMP AND VISCOUS DRIVE	2L17
598486	HUB VISCOUS DRIVE ASSY	1D10
598486	HUB VISCOUS DRIVE ASSEMBLY	1D11
598486	SPINDLE-WATER PUMP	1E10
598491	PULLEY-WATER PUMP	1E10
598516	SEALING PAD FOR CATCH TANK	2K14
598517	COVER FOR SEALING PAD	2K14
598531	OVERFLW BOTTLE SUPPORT-BRKT	2D02
598536	PLATE-BOTTOM-ROAD SPRING	1J16
598539	SILENCER AND TAIL PIPE	2C07
598540	EXHAUST SILENCER	2C06
598540	SILENCER AND TAIL PIPE	2C07

PART NUMBER	DESCRIPTION	REF.NO.
598575	MOUNTING BRACKET-FUEL PUMP	1N08
598652	BELL CRANK LEVER	1010
598654	LOST MOTION LEVER	1010
598792	PLATE-EXHAUST MOUNTING	2G02
598823	BRACKET-ACCELERATOR SHAFT CONTROL	1012
598844	ACCELERATOR CONNECTING LEVER	1N10
598848	SPRING ANCHOR-ACCELERATOR CONTROL	1012
598850	ACCELERATOR LEVER	1011
598851	BRACKET-ACCELERATOR CABLE	1012
598852	ACCELERATOR CABLE ASSEMBLY	1012
598853	PLAIN WASHER	1C14
598853	PACKING PIECE	1D15
598854	CHECK STRAP	2G02
598877	FRONT EXHAUST PIPE	2L13
598879	EXHAUST BLEED PIPE	2L13
598880	NUT	2L13
598882	CLIP	2L13
598899	OLIVE	2L13
599061	TRACK ROD TUBE	1K06
599063	TRACK ROD ADJUSTER TUBE	1K06
599102	PIPE, VALVE TO LHF	2L12
599224	FUEL PIPE	2L15
599225	FUEL PIPE	2L15
599233	FUEL TANK	1003
599233	FUEL TANK	1004
599234	FUEL TANK	1003
599234	FUEL TANK	1006
599312	CHOKE PULL CONTROL ASSEMBLY	1014
599313	CHOKE PULL CONTROL ASSEMBLY	1014
599314	CHOKE PULL CONTROL ASSEMBLY	1014
599336	CHOKE PULL CONTROL ASSEMBLY	1014
599337	CHKE PULL CNTRL ASSY 2 6 PET- ϕ RHD	1014
599338	CHKE PULL CNTRL ASSY 2.250 PET- ϕ LHD	1014
599339	ENGINE STOP CNTRL DIESEL RHD	1014
599340	ENGINE STOP CNTRL DIESEL LHD	1014
599343	PIPE, VALVE TO RHF	2L12
599378	SILENCER AND TAILPIPE 109 4 CYL S/W	2C08
599396	SUPPORT BRACKET	2F09
599443	VALVE-PRESSURE DIFFERENTIAL	1L12
599443	SHUTTLE VALVE	2L12
599447	FUEL PIPE COMPL TANK TO PUMP	1N11
599447	PIPE-FUEL	1N13
599447	PIPE-FUEL	1N13
599448	FUEL PIPE TANK TO PUMP	1N12
599552	BOLT-SPECIAL	1I04

PART NUMBER	DESCRIPTION	REF.NO.
599575	JOINT WASHER	1I05
599698	DISTANCE PIECE FOR SWIVEL PIN	1J06
599698	SPACER-STUB AXLE	1J12
599698	SPACER STUB SHAFT	1J13
599826	STUB AXLE ASSEMBLY 88	1J06
599827	STUB AXLE ASSEMBLY 109	1J06
599828	SLEEVE-HUB BEARING	1J13
599828	REAR HUB SLEEVE	1J12
599869	ROLLER BEARING	1H07
599945	DIFFERENTIAL CROSS SHAFT	1J08
599995	HOUSING-SPEEDOMETER DRIVE	1I11
600174	THRUST WASHER	1D04
600175	THRUST WASHER	1D04
600176	THRUST WASHER	1D04
600177	THRUST WASHER	1D04
600178	THRUST WASHER	1D04
600179	THRUST WASHER	1D04
600200	WHL CYLINDER ASSY LH FRONT	1L03
600201	WHL CYLINDER ASSY RH FRONT	1L03
600202	ANCHOR PLATE	1L03
600203	ANCHOR PLATE	1L03
600210	OVERHAUL KIT-FRONT	2L07
600210	WHEEL CYLINDER KIT	1L03
600212	SPRING	1L03
600226	ADAPTOR & LEADS	2F02
600243	FLYWHEEL ASSEMBLY	1G02
600245	STUD KIT-CYLINDER BLOCK	1C02
600245	STUD-KIT-CYLINDER BLOCK	1E02
600303	'LOCTITE'RETAINING COMPOUND-	2L07
600310	2ND LEAF	1J18
600311	DOWEL FOR SPRING	1J18
600329	TERMINAL BUSH & LEAD	2E02
600329	TERMINAL AND LEAD-DISTRIBUTOR	2E04
600401	OIL CONTAINER-AIR CLEANER	1N02
600423	SCREW AND WASHER	2F03
600423	SPECIAL SCREW AND WASHER	2F04
600476	SPRINGS SET	2E02
600538	CROWN WHEEL & PINION	1J08
600603	GEARBOX GASKET KIT	1H02
600603	GEARBOX GASKET KIT	2L07
600613	FILTER-AIR CLEANER	1N02
600613	ELEMENT FOR AIR CLEANER	1N02
600613	FILTER-AIR CLEANER	1N03
600656	FLANGE	1J02
600656	FLANGE-PROPELLOR SHAFT	1J03

PART NUMBER	DESCRIPTION	REF. NO.
600656	FLANGE-PROPELLER SHAFT	1J14
601314	BARSEAL SEALING PELLET	2L07
601543	GROMMET	2F03
601717	GASKET	2F03
601721	LENS	2F04
601754	SPRING SET	2E07
601754	SPRING SEAT-STARTER MOTOR BRUSHES	2E08
601790	SPLINED STUB SHAFT	1J02
601790	SPLINE-PROPELLOR SHAFT	1J03
601790	SPLINE-PROPELLER SHAFT	1J14
601835	THROTTLE SPINDLE	1M02
601836	THROTTLE LEVER	1M02
601837	THROTTLE STOP	1M02
601838	NUT-SPECIAL	1M06
601838	SPECIAL NUT	1M02
601840	RELAY LEVER	1M02
601841	SPLIT PIN	1M02
601842	LEVER	1M02
601843	PLAIN WASHER	1M02
601844	BUTTERFLY FOR THROTTLE	1M02
601845	SCREW-CARBURETTER THROTTLE	1M07
601845	SPECIAL SCREW	1M10
601845	SCREW FIXING THROTTLE VALVE	2L17
601845	SPECIAL SCREW	1M02
601846	SPECIAL SCREW	1M02
601850	'O' RING	1M03
601852	BALL FOR PISTON	1M03
601853	CIRCLIP	1M03
601854	PLUG FOR PUMP JET	1M03
601856	ACCELERATOR PUMP	1M03
601857	SPECIAL WASHER	1M03
601858	FLOAT	1M03
601859	SPINDLE FOR FLOAT	1M03
601860	TOP COVER	1M02
601861	LEVER & SWIVEL	1M03
601862	SPRING	1M03
601863	CIRCLIP	1M03
601864	BOLT FOR CHOKE SPINDLE LEVER BRACKET	1M03
601865	CHOKE SPINDLE	1M03
601866	SPRING	1M03
601867	BUTTERFLY FOR CHOKE	1M02
601869	PLAIN WASHER	1M03
601872	SPECIAL SCREW	1M03
601873	SHAKEPROOF WASHER	1M03
601874	SPINDLE & LEVER	1M03

PART NUMBER	DESCRIPTION	REF.NO.
601875	SPACING WASHER	1M03
601876	PUMP LEVER	1M02
601877	WASHER-STARLOCK	1M06
601877	WASHER	1M02
601878	RETAINING RING	1M02
601879	DIAPHRAGM	1M02
601880	GASKET	1M02
601881	SPRING	1M02
601882	COVER	1M02
601883	SCREW	1M02
601884	SPRING WASHER	1M02
601886	SPECIAL SCREW	1M03
601887	SPRING WASHER	1M03
601888	SCREW & WASHER	1M02
601889	SCREW AND WASHER FOR CARB TOP COVER	1M02
601891	SPLIT PIN	1M03
601892	PLAIN WASHER	1M03
601893	LINK	1M02
601894	SPLIT PIN	1M02
601895	MAIN JET	1M03
601897	SLOW RUNNING JET	1M03
601899	PUMP JET	1M03
601900	NEEDLE VALVE FOR CARBURETTER	1M03
602040	DOWEL	1F09
602061	NUT-CONNECTING ROD	1F04
602067	SPRING-OIL RELEASE	1F05
602070	STRAINER-ENGINE OIL	1F03
602071	PLUG-OIL PUMP	1F05
602076	RETAINER-INLET MANIFOLD GASKET SEAL	1F07
602082	CONNECTING ROD	1F04
602087	GASKET-ENGINE SUMP	1F03
602097	BOLT-SPECIAL	1F05
602098	WASHER-PLAIN	1F09
602098	WASHER-PLAIN	1F09
602099	SEAL-INLET MAINFOLD GASKET	1F07
602123	PLUG-CYLINDER HEAD	1F09
602130	BOLT-SPECIAL	1F02
602141	DOWEL	1F02
602142	SPRING-VALVE ROCKER	1F05
602146	CUP PLUG	1F02
602147	CUP PLUG	1F02
602148	WASHER-CONCAVE	1F05
602152	CUP PLUG	1F02
602152	CUP PLUG	1F02
602152	CUP-PLUG	1F06

PART NUMBER	DESCRIPTION	REF.NO.
602153	ROCKER-VALVE R.H.	1F05
602154	ROCKER-VALVE L.H.	1F05
602172	BAFFLE-VALVE GEAR	1F05
602186	WASHER-PLAIN	1F05
602191	BOLT-SPECIAL	1F09
602192	BOLT SPECIAL	1F09
602193	BOLT-SPECIAL	1F09
602199	SCREW-SPECIAL	1F03
602201	DOWEL	1F04
602212	PLUG	1F02
602212	SCREWED PLUG FOR OIL FILTER ADAPTOR	1D13
602227	BOLT	1F06
602236	BOLT	1F07
602289	CUP PLUG FOR CYLINDER HEAD	1E11
602289	CUP-PLUG	1F09
602388	BOLT	1F04
602411	SPACING WASHER	1F03
602505	PULLEY-ALTERNATOR	2E16
602512	GASKET-ROCKER COVER	1F10
602530	SCREW-SPECIAL	1F10
602539	CLIP	1D14
602539	CLIP-HOSE TO ROCKER COVER	2L17
602582	FAN PULLEY	1F11
602587	RETAINER-CRANKSHAFT PULLEY	1F03
602609	BOLT-CONNECTING ROD	1F04
602634	'O' RING	1M11
602910	BOLT SPECIAL 0.8750" LONG	1F05
602912	BOLT SPECIAL 1.25" LONG	1F05
602913	BOLT SPECIAL 1.5625" LONG	1F05
602915	DRAIN TAP	1C02
602915	TAP-WATER DRAIN	1D03
602915	TAP-WATER DRAIN	1E02
603031	BRACKET ENGINE LIFTING	1F09
603069	SEAL	1N05
603127	SCREW-SPECIAL	1F10
603143	PIPE-WATER	1F02
603184	CLIP-PIPE	1F10
603224	PLUG-INLET MANIFOLD	1F06
603237	ROLLER	1M12
603277	BANJO	1F06
603301	RIM BALANCING-CRANKSHAFT	1F03
603330	FLAME TRAP	1D09
603330	FLAME TRAP	1M13
603330	TRAP-FLAME-EVAPORATIVE	2L12
603330	FLAME-TRAP	2L16

PART NUMBER	DESCRIPTION	REF.NO.
603376	CLIP	1M13
603378	PUSH ROD-VALVE	1F05
603428	DOWEL	1F11
603431	UNION NUT FOR FUEL PIPE	1N11
603431	NUT-FUEL PIPE	1N12
603431	NUT-FUEL PIPE	1N13
603431	NUT-FUEL PIPE	1N13
603441	GASKET-WATER OUTLET PIPE	1F06
603446	SEALING WASHER-DISTRIBUTOR	2E06
603521	JOINT WASHER	1F05
603535	ROLL PIN	1F03
603554	GUIDE VALVE	1F09
603561	BRACKET	1F06
603561	ANCHOR BRACKET	1M12
603622	SPRING	1M12
603659	PLUG-ENGINE OIL DRAIN	1F03
603672	CLIP-PLUG LEADS	1F10
603673	CLIP-DISTRIBUTOR LEADS	2E06
603675	CLIP-PLUG LEADS	1F10
603734	PEDESTAL-VALVE ROCKER SHAFT	1F05
603775	GASKET-FRONT COVER	1F04
603796	GASKET-CYLINDER HEAD	1F09
603851	GROMMET	1N04
603851	GROMMET	1N06
603887	CLIP FIXING HOSE	1N14
603887	CLIP FIXING HOSE	1N15
603887	CLIP FIXING HOSE	1N16
603887	HOSE CLIP-FUEL TANK BALANCE PIPE	1002
603887	CLIP-FUEL TANK BREATHER HOSE	1004
603887	CLIP-HOSE	2L16
603920	ADAPTOR-AIR BLEED	1F06
605011	SEAL	1N10
605012	DRAIN PLUG	1N10
605013	SEAL	1N10
605092	OUPERHAUL KIT	1M02
605092	CARBURETTER OVERHAUL KIT	2L07
605093	CARBURETTER OVERHAUL KIT	2L07
605093	GASKET KIT	1M02
605106	GASKET KIT	1D03
605106	ENGINE OVERHAUL GASKET KIT	2L07
605157	CYLINDER BLOCK ASSEMBLY	1D03
605169	GASKET SMALL	1D13
605190	CAP-DRISTRIBUTOR	2E06
605191	ELEMENT	1N05
605238	PLASTIGAUGE STRIP-BOX OF 24	2L07

PART NUMBER	DESCRIPTION	REF.NO.
605322	SPRING WASHER	1M07
605508	END PLATE FOR STEERING BOX	1K02
605544	DISTRIBUTOR CAP	2E04
605544	CAP-DRISTRIBUTOR	2E05
605544	DISTRIBUTOR CAP	2L17
605622	SUNDRY PARTS	2E09
605683	MAIN JET	1M03
605684	MAIN JET	1M03
605685	MAIN JET	1M03
605686	MAIN JET	1M03
605687	SLOW RUNNING JET	1M03
605705	NUT	2E09
605716	OVERHAUL KIT	1D09
605716	WATER PUMP OVERHAUL KIT	2L07
605765	COOLANT INHIBITOR	2L07
605793	ADAPTOR	1M05
605794	SPINDLE	1M06
605795	LEVER	1M06
605797	WASHER	1M06
605799	NUT	1M06
605800	BUTTERFLY-CARBURETTER	1M10
605800	BUTTERFLY	1M06
605801	SCREW	1M06
605803	COVER	1M06
605804	SPINDLE	1M06
605805	SPRING	1M06
605806	WASHER	1M06
605807	SCREW	1M06
605808	LEVER	1M06
605809	RETURN SPRING	1M06
605810	WASHER	1M06
605811	SCREW	1M06
605813	BRACKET	1M06
605815	SCREW	1M06
605816	SCREW	1M05
605817	SPRING	1M05
605820	PIN	1M05
605821	SPRING	1M05
605822	CLIP	1M05
605827	JET ORIFICE	1M06
605828	SPRING	1M06
605830	CARRIER	1M06
605833	FLOAT-CARBURETTER	1M07
605833	FLOAT-CARBURETTER	1M10
605833	FLOAT AND ARM	2L17

PART NUMBER	DESCRIPTION	REF.NO.
605833	FLOAT	1M06
605835	GASKET	1M05
605836	FLOAT CHAMBER	1M05
605837	SCREW	1M05
605838	SCREW	1M05
605842	RETAINING RING-CARBURETTER	1M05
605843	SCREW	1M05
605844	AIR VALVE	1M05
605845	SCREW	1M05
605846	TOP COVER	1M05
605847	SCREW	1M05
605848	DAMPER & CAP	1M05
605848	DAMPER-CARBURETTER	1M07
605848	DAMPER-CARBURETTER	1M10
605848	DAMPER AND OIL CAP	2L17
605857	GASKET KIT	1M05
605857	CARBURETTER GASKET KIT	2L07
605904	SPINDLE & GEAR	2F06
605925	SOLENOID	1M02
605997	LINING PACKAGE FOR CLUTCH	1G02
605997	LINING-CLUTCH	1G03
606098	CARBURETTER KIT	1M05
606098	CARBURETTER OVERHAUL KIT	2L07
606104	ELEMENT	1N04
606168	BREATHER FILTER	1M13
606168	BREATHER FILTER	1N04
606177	LIGHT UNIT	2F02
606178	BULB	2F02
606187	UNIVERSAL WING MIRROR HEAD	2G07
606207	SEAL FOR CENTRE BOLT	1N09
606211	LENS-NUMBER PLATE	2F04
606217	GASKET FOR STOP TAIL LAMP	2F03
606220	CIRCLIP	2E07
606220	RETAINER-BENDIX SPRING STARTER	2E08
606247	CLIP	1N04
606247	CLIP	1N05
606248	VALVE-DISPOSAL	1N04
606248	DUMP VALVE	1N05
606318	CARBURETTER JET FOR EMULSION BLOCK	1M03
606319	EMULSION BLOCK	1M03
606404	SEALING WASHER	1L07
606415	KIT-BRAKE MASTER CYLINDER	1L07
606415	OVERHAUL KIT	2L07
606474	BEARING-BALL	1I11
606487	NEEDLE	1M05

PART NUMBER	DESCRIPTION	REF.NO.
606501	BULB HOLDER	2F04
606661	SHAFT-ROCKER	1F05
606679	GASKET	1M02
606731	SPRING-CLUTCH CYLINDER	1G05
606733	SCREW-BLEED	1G05
606737	PLATE-ANCHOR-TRANSMISSION	1L05
606739	LEVER-TRANSMISSION BRAKE	1L05
606740	SHIM-SEALING-TRANSMISSION	1L05
606741	PIVOT-BRAKE SHOE	1L05
606742	ADJUSTER-TRANSMISSION BRAKE	1L05
606743	ADJUSTER-TRANSMISSION BRAKE	1L05
606744	PIVOT-BRAKE SHOE ADJUSTER	1L05
606745	WASHER-PLAIN-SPECIAL	1L05
606746	RETAINER-TRANSMISSION BRAKE	1L05
606747	SPRING-BRAKE SHOE RETAINING	1L05
606749	SPRING-BRAKE SHOE	1L05
606750	SPRING-TRANSMISSION BRAKE	1L05
606754	GASKET KIT-GEARBOX	1I25
606819	PIN FOR NEEDLE VALVE	1M06
606835	BOLT FOR ALTERNATOR	2E10
606835	BOLT	2E12
606835	BOLT-ALTERNATOR	2E14
606835	BOLT	2E16
606880	PRIMARY PINION	1H04
606880	GEARS-PRIMARY PINION AND CONSTANT	1H05
606881	GEAR BOX CASING	1H03
606895	BUSH	2E02
606988	EXHAUST MANIFOLD FIXING KIT	1C13
607162	GEAR CARRIER CASING	1J12
607163	BOLT	1J03
607163	BOLT	1J12
607164	CASE-DIFFERENTIAL	1J13
607164	DIFFERENTIAL CASE LESS GEARS	1J09
607165	BOLT FOR DIFFERENTIAL CROWN	1J09
607165	BOLT	1J13
607168	WASHER-CONCAVE-DIFFERENTIAL	1J13
607168	THRUST WASHER	1J09
607169	WASHER-DIFFERENTIAL WHEEL	1J13
607169	THRUST WASHER	1J09
607172	PLUG	1J12
607173	BOLT	1J12
607173	BOLT	1J03
607177	SHIM CROWN WHEEL PINION	1J13
607177	SHIM	1J09
607178	SHIM CROWN WHEEL PINION	1J13

PART NUMBER	DESCRIPTION	REF.NO.
607178	SHIM FOR PINION BEARING	1J09
607179	SHIM CROWN WHEEL PINION	1J13
607179	SHIM	1J09
607180	BEARING-PINION	1J13
607180	PINION BEARING	1J03
607180	PINION BEARING	1J09
607181	BEARING-BALL	1J12
607181	PINION BEARING	1J03
607182	OIL THROWER	1J12
607182	OIL THROWER	1J03
607183	GASKET	1J12
607183	GASKET	1J03
607185	FLANGE	1J03
607185	FLANGE-REAR AXLE	1J12
607186	BRACKET	1J12
607187	BEARING-BALL	1J13
607187	BEARING	1J09
607188	SHIM-DIFFERENTIAL	1J13
607188	SHIM	1J09
607189	SHIM-DIFFERENTIAL	1J13
607189	SHIM	1J09
607190	SHIM-DIFFERENTIAL	1J13
607190	SHIM	1J09
607191	SHIM-DIFFERENTIAL	1J13
607191	SHIM	1J09
607197	SPACER-CROWN WHEEL PINION	1J13
607197	SPACER	1J09
607247	REAR AXLE ASSY LESS HUB	1J12
607252	RIVETS FOR BRAKE SHOE	1L05
607357	WASHER-PLAIN	1J12
607357	WASHER FOR PINION	1J03
607605	WASHER FOR NEEDLE VALVE	1M06
607677	NUT FOR VOLUME CONTROL SCREW	1M02
607678	PUMP DISCHARGE VALVE	1M03
607753	BOLT KIT FOR STARTER	2E09
607754	ARMATURE FOR STARTER MOTOR	2E09
607808	STEADY POST AND BUSH	1L03
607814	THROTTLE STOP AND FAST IDLE LEVER	1M06
607815	BUSH FOR JET ORIFICE	1M06
607932	PIN RETAINING KIT FOR STRTR MOTOR	2E07
607932	KIT-PINION RETAINING STARTER	2E08
607965	STEERING BOX ASSEMBLY RH STG	1K02
607966	STEERING BOX ASSEMBLY LH STG	1K02
607968	BUSH FOR RCKER SHFT-STG BOX	1K02
607971	TUBE HOUSING STEERING COLUMN	1K02

PART NUMBER	DESCRIPTION	REF.NO.
607972	BOLT SPECIAL FOR STEERING	1K02
607992	BOLT SPECIAL FOR STEERING	1K02
607993	SPECIAL BOLT 0.3125UNC X 0.875	1K02
608004	SCREW AND WASHER	2F03
608004	SCREW AND WASHER FOR FLASHER LAMP	2F04
608005	SCREW AND WASHER FOR SIDE LAMP	2F03
608023	STUB SHAFT FOR SWIVEL PIN	1J05
608074	SUPPRESSOR FOR ALTERNATOR	2E10
608074	SUPPRESSOR FOR ALTERNATOR	2E12
608074	SUPPRESSOR-ALTERNATOR	2E14
608074	SUPPRESSOR-ALTERNATOR	2E16
608094	BRUSH/SPRING DISTRIBUTOR CAP	2E06
608111	VACUUM UNIT FOR DISTRIBUTOR	2E02
608118	BRACKET-DRIVE END-ALTERNATOR	2E16
608119	REGULATOR-ALTERNATOR	2E16
608124	GASKET SET ENGINE OVERHAUL	1C02
608124	ENGINE OVERHAUL GASKET KIT	2L07
608142	BEVEL PINION AND SIDE GEAR	1I10
608142	BEVEL PINION AND SIDE GEARS	1I11
608143	SHAFT PINION-DIFFERENTIAL	1I10
608152	BUTTERFLY FOR THROTTLE	1M02
608158	CONTACT POINTS-DISTRIBUTOR	2E06
608172	BUSH KIT FOR STARTER MOTOR	2E07
608172	BUSHES-STARTER MOTOR	2E08
608174	STARTER MOTOR DRIVE END BRKT	2E07
608174	BRACKET-STARTER MOTOR END	2E08
608194	VACUUM UNIT-DISTRIBUTOR	2E06
608197	LEAD-LOW TENSION-DISTRIBUTOR	2E06
608246	PLUG	1H03
608246	PLUG-BOTTOM COVER	1H09
608246	PLUG-FILLER	1J02
608246	PLUG, FILLER	1J03
608246	PLUG-OIL LEVEL	1J07
608246	PLUG-REAR AXLE	1J12
608246	PLUG, DRAIN	1J12
608246	OIL FILLER PLUG	1J03
608283	INNER AND OUTER MEMBERS	1H04
608296	DRIVING LAMP	2F02
608304	BUSH KIT FOR STARTER MOTOR	2E09
608327	CYLINDER BLOCK 2.25 PETROL	1C02
608327	CYLINDER BLOCK	1E02
608352	BUSH KIT	2E09
608417	COVER PLATE-GEARBOX	1I04
608464	BALL JOINT ASSY RH THREAD	1K06
608464	BALL JOINT-STEERING LINKS	1K07

PART NUMBER	DESCRIPTION	REF.NO.
608465	STEERING TRACK ROD ASSY	1K06
610025	BRACKET	1M13
610178	DOG-STARTING	1F03
610289	CHAINWHEEL-CRANKSHAFT	1F06
610327	JOINT WASHER	1M11
610333	THROTTLE LEVER	1M12
610402	CLIP-PLUG LEADS	1F10
610489	CLIP-OIL DIPSTICK TUBE	1F02
610529	DOWEL	1D10
610529	DOWEL FOR VISCOUS DRIVE HUB	1D11
610529	DOWEL-WATER PUMP SANDLE	1E10
610529	DOWEL	1F11
610578	HUB ASSEMBLY	1F11
611015	OLIVE	1M09
611019	PULLEY-CRANKSHAFT	1F03
611022	BRACKET-ALTERNATOR	2E16
611089	SEAL-REAR MAIN BEARING CAP	1F02
611109	HOSE	1M13
611110	HOSE	1M13
611110	CONNECTION-RUBBER-PIPE TO	2L15
611110	RUBBER CONNECTION PIPE TO CATCH TANK	2K14
611113	HOSE	1M13
611114	HOSE	1M13
611185	LOCATING PLATE FOR VACUUM SWITCH	2L15
611323	RING GEAR-FLYWHEEL	1G03
611324	FLYWHEEL ASSEMBLY	1G03
611351	BRACKET	1M13
611409	SEAL-OIL-REAR MAIN BEARING	1F02
611514	UNION-OIL PUMP	1F05
611786	GASKET-WATER OUTLET PIPE	1F07
612093	RIVET	2G08
612320	ADJUSTING LEVER	1M12
612326	GASKET-WATER PUMP	1F10
612326	GASKET-WATER PUMP	1F11
612505	PETROL FEED PIPE	1M09
612689	LOCK WASHER	1F08
612710	HOUSING-ENGINE OIL STRAINER	1F03
612871	BRACKET	1F04
612898	CUP PLUG	1F02
612980	SUMP-ENGINE OIL	1F03
612989	CRANKSHAFT	1F03
613087	FAN BLADE	1F11
613187	CLIP	1D14
613187	CLIP-HOSE TO AIR PUMP	2L17
613244	COWL-ALTERNATOR	2E16

PART NUMBER	DESCRIPTION	REF.NO.
613514	CHOKE PIPE	1M09
613519	AIR INTAKE HOSE	1N06
613538	VACUUM PIPE	2L15
613602	FAN BELT	1F11
613602	BELT-FAN	1F12
613620	BRACKET-ALTERNATOR	2E16
613669	DAMPER-VIBRATION	1F03
613671	DEFLECTOR-CRANKSHAFT	1F03
613805	CLIP	1M13
613805	CLIP	1N04
613857	RETAINER-DISTRIBUTOR	2E06
614037	GEAR-OIL PUMP	1F05
614088	DOWEL-INLET	1F09
614089	VALVE-EXHAUST	1F09
614188	GEAR-DISTRIBUTOR DRIVE	1F06
614202	FILTER-OIL PUMP	1F05
614361	VACUUM SWITCH	2L15
614443	BOLT-SPECIAL	1F08
614555	OLIVE	1M09
614585	CLAMP-DIPSTICK PIPE	1F02
614737	PULLEY-FAN	1F12
614739	FAN ASSY	1D10
614739	FAN ASSEMBLY	1D11
614739	FAN BLADE	1E10
614739	FAN BLADE	1F12
614739	FAN ASSEMBLY	2L17
614866	CONNECTOR	1N05
614890	CLIP	1N06
614891	PLASTIC PIPE	1M09
614891	TUBE	1M09
614891	PIPE	1N05
614908	SPINDLE-FAN PULLEY	1F11
614920	HOT AIR HOSE	1N06
614938	LINK-ADJUSTER-ALTERNATOR	2E16
614939	LINK ADJUSTER-ALTERNATOR	2E16
622042	OIL SEAL FOR SPEEDO DRIVE	1H08
622045	GASKET-GEAR BOX BELL HOUSING	1H02
622046	JOINT WSHR-TRANSFER BOX TO GEARBOX	1H09
622047	JOINT WASHER FOR BEARING HOUSING	1H09
622048	JOINT WASHER-OUTPUT SHAFT	1H10
622141	VALVE-VACUUM CONTROL	1I13
622155	SELECTOR FORK	1H12
622281	BOLT 0.25 BSF X 0.40625 cLONG	1H11
622324	CLIP-PIPE	1I05
622388	PAD-SELECTOR-LEVER	1I12

PART NUMBER	DESCRIPTION	REF.NO.
622538	BEARING	1I06
623036	PANEL AND INTERIOR SWITCH	2F09
623037	PANEL LIGHT SWITCH	2F09
623055	SPEEDOMETER CABLE LH STG	2F08
623087	CABLE ENGINE HARNESS	2F10
623088	CABLE ENGINE HARNESS	2F11
623089	CABLE ENGINE HARNESS	2F10
623097	FUEL GAUGE UNIT	1003
623097	GAUGE-FUEL TANK	1004
623097	GAUGE-FUEL TANK	1006
623098	FUEL GAUGE UNIT	1003
623100	EARTH LEAD	2F10
623100	LEAD-EARTH	2F11
623192	TEE PIECE	2F15
623210	BATTERY TERMINAL LEAD	2F12
623213	HEAVY CABLE BATTERY-STARTER SOLENOID	2F12
624021	CLIP FOR AIR CLEANER	1N03
624027	'U' BOLT	1J15
624028	'U' BOLT	1J15
624034	'U' BOLT	1J15
624055	SUPPORT BRACKET	2F09
624077	BOTTOM PLATE LH	1J15
624078	BOTTOM PLATE RH	1J15
624079	BOTTOM PLATE LH	1J15
624080	BOTTOM PLATE RH	1J15
624084	BOTTOM PLATE RH	1J17
624170	FLEXIBLE MOUNTING PLATE	2C03
624196	FRONT EXHAUST PIPE DIESEL	2C03
624251	WASHER-HANDBRAKE RELEASE	1L14
624252	HANDBRAKE LEVER ASSY RHD	1L14
624262	HANDBRAKE LEVER ASSY LHD	1L14
624341	TAIL PIPE COMPLETE	2C10
624363	HOSE FOR RADIATOR TOP	2D02
624364	HOSE FOR RADIATOR TOP	2D02
624430	BATTERY TRAY	2G04
624434	SEAL-OIL	1K05
624452	DRAIN TUBE	2G04
625038	CAP ENGINE OIL FILLER	1C12
625038	CAP-ENGINE OIL FILLER	1F10
625580	SPECIAL WASHER	2F03
850641	PLAIN WASHER	1C14
850641	WASHER-PLAIN	1D15
850641	WASHER-PLAIN	1E13
851041	PLAIN WASHER	2G05
851041	PLAIN WASHER	2G06

PART NUMBER	DESCRIPTION	REF.NO.
889861	BOLT	2E13
10802070	WASHER JOINT	1E11
90212104	STUD FOR BOTTOM COVER	1H09
90213636	SHAFT FOR SELECTOR FORK	1H11
90214684	SPRING RING FIXING COVER	1K06
90214684	SPRING-STEERING BALL JOINT	1K07
90214684	SPRING RING	1K08
90215593	BOLT 0.25 WHIT X 0.65625 LONG	1H02
90215593	BOLT	1H11
90215647	BOLT 0.3125WHIT X 0.6875¢LONG	1H11
90215758	SET BOLT-0.25WHIT X 0.50 LONG	1H09
90215758	BOLT	1H10
90215758	BOLT	1H11
90215769	BOLT	1H10
90215769	BOLT 0.25 WHIT X 0.4375 ¢LONG	1H11
90217355	NUT FOR REAR HUB	1J10
90217355	NUT FOR HUB	1J11
90217355	NUT-REAR HUB	1J13
90217398	THRUST SLEEVE	1J05
90217488	THRUST WASHER	1H07
90217512	ROLLER BEARING-SPEEDO DRIVE	1H08
90217521	BUSH FOR SELECTOR SHAFT	1H12
90217526	CIRCLIP	1H07
90217526	CIRCLIP	1I10
90217584	SELECTOR FORK	1H13
90217636	CLIP-RESERVOIR TANK	1L07
90217636	CLIP-RESERVOIR TANK	1L07
90217843	BUSH FOR MAINSHAFT BEARING	1H09
90217976	STUD-GEARBOX TRANSFER CASING	1H09
90217983	BEARING HOUSING-HANDBRAKE	1L14
90217983	RETAINER-HANDBRAKE CROSS	1L15
90217984	SPHERICAL BEARING-HANDBRAKE	1L14
90217984	BEARING HANDBRAKE	1L15
90218408	PIN FOR HANDBRAKE CROSS SHAFT	1L15
90218410	DISTANCE PIECE HANDBRAKE CROSS SHAFT	1L15
90306199	SUPPORT TUBE BEARING	2K06
90306200	SUPPORT TUBE	2K06
90306465	RUBBER BUFFER RADIATOR	2G05
90500610	SPRING FOR EXHAUST VALVE ROCKER	1D08
90502209	SPINDLE FOR OIL PUMP	1C04
90502209	SPINDLE-OIL PUMP	1D05
90502209	SPINDLE-OIL PUMP	1E04
90508035	CLIP FOR REAR BODY FIXING	2H02
90508035	CLIP	2H04
90508035	CLIP	2K03

PART NUMBER	DESCRIPTION	REF.NO.
90508035	CLIP	2K04
90508339	BRACKET	1D15
90508544	DISTANCE PIECE FUEL TANK MTGS	1002
90508544	DISTANCE PIECE-FUEL TANK MOUNTING	1003
90508544	DISTANCE PIECE-FUEL TANK MTG	1005
90508544	TUBE-DISTANCE-FUEL TANK MOUNTING	1006
90508545	MOUNTING RUBBER FUEL TANK	1002
90508545	MOUNTING-RUBBER-FUEL TANK	1003
90508545	MOUNTING RUBBER-FUEL TANK	1005
90508545	RUBBER-FUEL TANK MOUNTING	1006
90509730	CONNECTION FOR AIR CLEANER	1N03
90509970	GROMMET	1L06
90510730	SIDE COVER AND OIL FILLER PIPE	1C08
90510912	WASHER-SHAKEPROOF	2G18
90510912	FAN DISC WASHER	2H02
90510912	WASHER-SHAKEPROOF	2H04
90510912	WASHER-SHAKEPROOF	2H07
90510912	WASHER-STARLOCK	2H08
90511833	VALVE GUIDE	1D03
90511958	JOINT WASHER	1C10
90511958	GASKET-THERMOSTAT	1E10
90512142	COTTER HALVES-VALVE SPRINGS	2L12
90512142	VALVE COLLET	1D07
90512143	SLEEVE-LOCKING-VALVE SPRING	2L12
90512143	VALVE LOCKING SLEEVE EXHAUST	1D07
90512144	CAP-VALVE SPRING	2L12
90512144	VALVE SPRING CAP EXHAUST VALVES	1D07
90512205	INLET VALVE ROCKER ASSEMBLY	1C06
90512208	EXHAUST VALVE ROCKER ASSY	1C06
90512305	FAN DISC WASHER	1E11
90512413	CORE PLUG FOR CYLINDER HEAD	1E11
90512651	SHAKEPROOF WASHER	1G04
90512701	BOLT 0.375 UNF X 1.1875 LONG	1H08
90513171	DOUBLE ENDED UNION	1D11
90513171	ADAPTOR-BRAKE SERVO PIPE	1L07
90513454	WASHER FOR FLANGE	1J07
90513591	OIL FILTER	1D13
90513940	CLIP-BRAKE PIPE	1L07
90514721	CABLE CLIP	1M09
90515086	FLYWHEEL HOUSING ASSEMBLY	1G03
90515090	FAN BLADE ASSEMBLY	1E09
90515323	PISTON ASSEMBLY-TIMING CHAIN	1C04
90515855	BUSH FOR HIGH GEAR WHEEL	1H07
90516028	OIL SEAL FOR FRONT COVER	1D09
90517429	ROLLER FOLLOWER	1C06

PART NUMBER	DESCRIPTION	REF.NO.
90517429	BUSH-ROCKER SHAFT	1D08
90517429	ROLLER TAPPET	1E06
90517567	BRACKET-EXHAUST MOUNTING	2C07
90517567	BRACKET-EXHAUST MOUNTING TO PIPE	2C08
90517705	COVER-OIL PUMP	1I03
90517706	GASKET-OIL PUMP COVER	1I03
90517711	ELEMENT FOR FUEL FILTER	1N10
90518100	BOLT FOR CONNECTING ROD	1D04
90518362	BOLT	2L03
90518466	STUD CYLINDER HEAD TO BLOCK	1E11
90518719	TOP ROCKER COVER ASSEMBLY	1E12
90519054	CAMSHAFT BEARING FRONT	1C05
90519054	BEARING-CAMSHAFT	1E05
90519055	CAMSHAFT BEARING INTER/REAR	1C05
90519055	BEARING-CAMSHAFT	1E05
90519064	DOWEL LOWER	1C03
90519064	DOWEL	1D04
90519064	DOWEL	1E03
90519206	LOCATION STOP FOR JACK	1J05
90519602	CLIP	2F15
90519864	OIL PRESSURE SWITCH	1C12
90519864	SWITCH-OIL WARNING	1D11
90519864	SWITCH-OIL PRESSURE	1E12
90555649	LUCAR BLADE WIPER MOTOR EARTH	2F06
90560612	FUEL GAUGE UNIT	1004
90562714	ACCELERATOR PEDAL SHAFT	1009
90564216	EXTENSION PIECE OIL STRAINER	1D05
90564217	STUD-OIL STRAINER 0.25 UNF	1D05
90564334	OIL PUMP ASSEMBLY 2.6	1D05
90564812	PIN FIXING SERVO TO BRAKE PEDAL	1L06
90564812	PIN	2L13
90564832	GASKET BRAKE PEDAL BOX TO TOE BOX	1L06
90564832	GASKET-PLUG PEDAL-BRACKET	2L13
90566617	PIPE CONNECTION AT	1N10
90568054	JOINT WASHER	1F07
90568489	BANJO BOLT FIXING FUEL PIPE	1N10
90568525	STOP LEVER ASSEMBLY	1N10
90569017	CROSSMEMBER NO 4 1 TON	2G02
90569126	CYLINDER-BRAKE MASTER	1L07
90569128	CYLINDER-BRAKE MASTER	1L07
90569214	TAIL PIPE COMPLETE	2C10
90569611	BRAKE PEDAL ASSEMBLY	1L06
90569612	GASKET STOP LIGHT MOUNTING PLATE	1L06
90569612	GASKET-MOUNTING PLATE BRAKES	2L12
90571010	GEAR-MAIN SHAFT TRANSFER	1I06

PART NUMBER	DESCRIPTION	REF.NO.
90571030	PIN-SELECTOR SHAFT	1I12
90571086	GEAR-OIL PUMP	1I03
90571091	CIRCLIP	1I06
90571104	PLUG-GEARBOX OIL FILTER	1I04
90571451	SHIM	1I06
90574103	SET BOLT 0.4375UNF X 2.531	1D12
90574104	SET BOLT 0.4375UNF X 4.906	1D12
90574655	HOSE BREATHER TO MANIFOLD	1E12
90575015	NUT FOR SOLEN 010 TERMINAL POST	2F12
90575150	NUMBER PLATE LAMP	2F04
90575153	KNOB WIPER WASHER SWITCH	2F09
90575153	KNOB FOR SWITCH	2F15
90575183	LEAD STARTER MOTOR TO EARTH	2F12
90575478	CLAMP PLATE	2C11
90575511	CLAMP	2C11
90575585	BRACKET-GEARBOX MOUNTING	1I05
90575585	MOUNTING BRACKET	1I05
90575977	HOSE TO PENTHOUSE	2D04
90576510	BOLT 0.375 BSF X 1.25 LONG	1J05
90576624	BRAKE DRUM TRANSMISSION	1L05
90576626	BOLT	1I11
90576631	HOUSING-GEARBOX	1I05
90576632	BUSH-OUTPUT SHAFT	1I11
90576658	BOLT	1I12
90577082	CLIP OVERFLOW BOTTLE OUTLET	2D02
90577082	CLIP-HOSE	2L12
90577119	SHFT AND LEVER FOR HAND-CONTROL	1014
90577143	SUPPORT PLATE FOR NO. PLATE	2G02
90577144	FRONT SUPPORT PLATE-NUMBER PLATE	2G02
90577264	STG BOX STIFFENER BRACKET	1K04
90577434	BUSH-FRONT SPRING SHACKLE	1J15
90577434	BUSH-ROAD SPRING SHACKLE	1J16
90577449	TRUNNION-ACCELERATOR SHAFT CONTROL	1012
90577473	NUT-ROAD WHEEL	1J18
90577473	NUT	2H16
90577473	NUT	2I02
90577508	FUEL FILTER COMPLETE	1N09
90577508	FILTER ASSEMBLY-FUEL	2L15
90577611	PLUG-BRAKE SERVO	1L07
90577611	PLUG	2F13
90577611	PLUG	2L13
90577636	MASTER CYLINDER	1L07
90577636	TANK-BRAKE FLUID SUPPLY	1L07
90577716	SHACKLE PLATE INNER	1J16
90577718	SHACKLE PLATE OUTER	1J16

PART NUMBER	DESCRIPTION	REF.NO.
90577721	FRONT SPRING SHACKLE PLATE	1J15
90577723	SHACKLE PLATE OUTER PLAIN	1J15
90600400	OIL CONTAINER	1N02
90600400	CONTAINER-OIL-AIR CLEANER	1N03
90601848	VOLUME CONTROL SCREW	1M02
90601849	SPRING	1M02
90601890	PIN FOR CHOKE SPINDLE	1M03
90601898	VENTILATION SCREW	1M02
90602025	KEY-WOODRUFF	1F03
90602064	PLUGER-OIL PRESSURE	1F05
90602068	GASKET-ENGINE OIL STRAINER	1F03
90602072	GASKET-OIL PUMP	1F05
90602202	DOWEL	1F04
90602372	CHAINWHEEL-CRANKSHAFT	1F03
90605617	BRACKET FOR STARTER MOTOR	2E09
90605812	SHAKEPROOF WASHER	1M06
90606023	KIT-BRAKE MASTER CYLINDER	1L07
90606023	KIT,BRAKE MASTER CYLINDER	1L07
90606023	OVERHAUL KIT	2L07
90606261	GASKET FOR PETROL PUMP	1N08
90606261	GASKET	1N08
90606262	FILTER	1N08
90606262	FILTER FOR PETROL PUMP	1N08
90606664	SPACER	1J05
90607170	CROSS SHAFT-DIFFERENTIAL	1J13
90607170	CROSS SHAFT	1J09
90607193	BOLT FIXING DIFF CASE	1J13
90607607	CONTACT BREAKER BASE PLATE	2E02
90607607	PLATE-DISTRIBUTOR-BASE	2E04
90607676	LOCKNUT FOR THROTTLE STOP SCREW	1M02
90607679	BRACKET FOR CHOKE SPINDLE LEVER	1M03
90607743	BRACKET-SLIP RING END-	2E16
90607816	WASHER FOR CARBURETTER JET ORIFICE	1M06
90607973	JOINT WASHER FOR STG COL	1K02
90608178	SUNDRY PARTS KIT FOR STARTER MOTOR	2E07
90608178	KIT-SUNDRY PARTS-STARTER MOTOR	2E08
90608178	KIT-SUNDRY PARTS-STARTER MOTOR	2E09
90608241	ROLLER-FUEL PUMP DIAPHRAGM	1N07
90608271	TEMPERATURE COMPENSATOR	1M10
90608297	PROTECTIVE COVER	2F02
90608330	WINDSCREEN WASHER VALVE	2F15
90608462	LONGTITUDINAL TUBE ASSY	1K06
90608462	LONGTITUDINAL TUBE-STEERING	1K07
90608545	LOCKNUT	1J12
90608545	LOCK NUT	1J03

PART NUMBER	DESCRIPTION	REF.NO.
90611014	NUT	1M09
90611112	HOSE	1M13
90611504	BOLT	1F07
90614584	BOLT-SPECIAL	1F09
90622182	BANJO SLAVE CYLINDER BLEED	1G05
90622240	SEAL-OIL	1I11
90623054	SPEEDOMETER CABLE RH STG	2F08
90624031	U BOLT	1J17
90624033	'U' BOLT FRONT SPRING	1J15
90624083	BOTTOM PLATE LH	1J17
90624131	FRONT EXHAUST PIPE DIESEL	2C03
90624214	DOUBLE LIFT JACK	2L11
90624431	BATTERY TRAY	2G04
90624433	RETAINER-OIL SEAL STG RELAY	1K05
90624436	JOINT WASHER-OIL SEAL	1K05
AAU 1053	LEVER-DISTRIBUTOR PUMP	1N10
AAU 1405	BRUSH KIT FOR STARTER MOTOR	2E07
AAU 1405	BRUSHES-STARTER MOTOR	2E08
AAU 1484	NEEDLE VALVE	1M06
AAU 1582	FLUID-CLEANING BRAKE PARTS	2L07
AAU 1700	SWITCH	1L11
AAU 1700	P.D.W.A.SWITCH	1L12
AAU 1700	SWITCH	1L13
AAU 1979	CLIP	1C09
AAU 1979	HOSE CLIP	2D04
AAU 1979	HOSE CLIP	2D04
AAU 1981	CLIP	1C08
AAU 1983	CLIP	1C09
AAU 1983	HOSE CLIP	2D02
AAU 2003	BALL JOINT-ACCELERATOR ROD	1010
AAU 2003	BALL JOINT FOR CONTROL ROD	1012
AAU 2053	ROTOR FOR ALTERNATOR	2E10
AAU 2053	ROTOR-ALTERNATOR	2E12
AAU 2053	ROTOR-ALTERNATOR	2E14
AAU 2367	RETAINER	2L04
AAU 2825	WASHER-SPRING	1J12
AAU 2825	SPRING WASHER	1J03
AAU 2967	OVERHAUL KIT	1M11
AAU 3381	OIL SEAL FOR DIFF PINION	1J03
AAU 3686	CABLE STRAP	1G04
AAU 3686	CABLE STRAP	2L09
AAU 3956	FAN FOR ALTERNATOR	2E10
AAU 3956	FAN-ALTERNATOR	2E12
AAU 3956	FAN-ALTERNATOR	2E14
AAU 4813	DRIVE ASSY FOR STARTER MOTOR	2E09

PART NUMBER		DESCRIPTION	REF.NO.
AAU 6248		LEAD-LOW TENSION-DISTRIBUTOR	2E06
AAU 6564		THROTTLE VALVE ASSEMBLY	1M07
AAU 6564		THROTTLE VALVE	2L17
AAU 6565		VACUUM UNIT	2L17
AAU 6565		VACUUM UNIT FOR DISTRIBUTOR	2E05
AAU 6714		HALFSHAFT RH	1J05
AAU 6715		HALFSHAFT LH	1J05
AAU 6774		COLLAR	2H09
AAU 6774		COLLER	2H11
AAU 6774		COLLAR	2H13
AAU 6838		BRAKE M/CYL SERVICE KIT 88	2L13
AAU 6919		AVDELOK BOLT	2H09
AAU 6920		RIVET	2H11
AAU 7090		THROTTLE VALVE	1M10
AAU 7219		EMISSION PACK	1M11
AAU 7803		PIPE CLIP	1L11
AAU 7803		CLIP FOR PIPES	1L12
AAU 7803		PIPE CLIP	1L13
AAU 7803		PIPE CLIP	2L12
AAU 7965		CAP	1L08
AAU 7965		FILLER CAP FOR MASTER CYL	2L13
AAU 7967		CABLE TIE-VENT PIPES	1M11
AAU 8182		RIVET	2H11
AAU 8469		BRAKE LINING WITH RIVETS	1L03
AAU 8470		BRAKE LINING WITH RIVETS	1L04
AAU 8471		BRAKE LINING WITH RIVETS	1L03
AAU 8600		SURGE PROTECTION DEVICE-	2E10
AAU 8600		SURGE PROTECTION DEVICE	2E12
AAU 8600		SURGE PROTECTION DEVICE-ALTERNATOR	2E14
AAU 8781		TAPERPROOF PARTS KIT	1M05
AAU 8782		TAMPERPROOF PARTS KIT	1M02
AAU 9902		SEAL-FUEL FILTER CONTAINER	1N10
AAU 9903		SEAL-FUEL FILTER CONTAINER	1N10
AAU 9942		BRAKE LINING SET	11.04
AAU 9942		BRAKE LINING WITH RIVETS	1L02
AB 604031	L	DRIVE SCREW	2G10
AB 604031	L	DRIVE SCREW	2H16
AB 606021	L	SCREW	1C07
AB 606021	L	DRIVE SCREW	1C11
AB 606021	L	DRIVE SCREW	1C12
AB 606021	L	DRIVE SCREW	1E08
AB 606021	L	DRIVE SCREW	1E12
AB 606021	L	SCREW FOR LIGHT UNIT	2F02
AB 606021	L	DRIVE SCREW	2J03
AB 606031	L	DRIVE SCREW	1014